


SENNO PLUS

MC-LUX01

COWAYBEREX

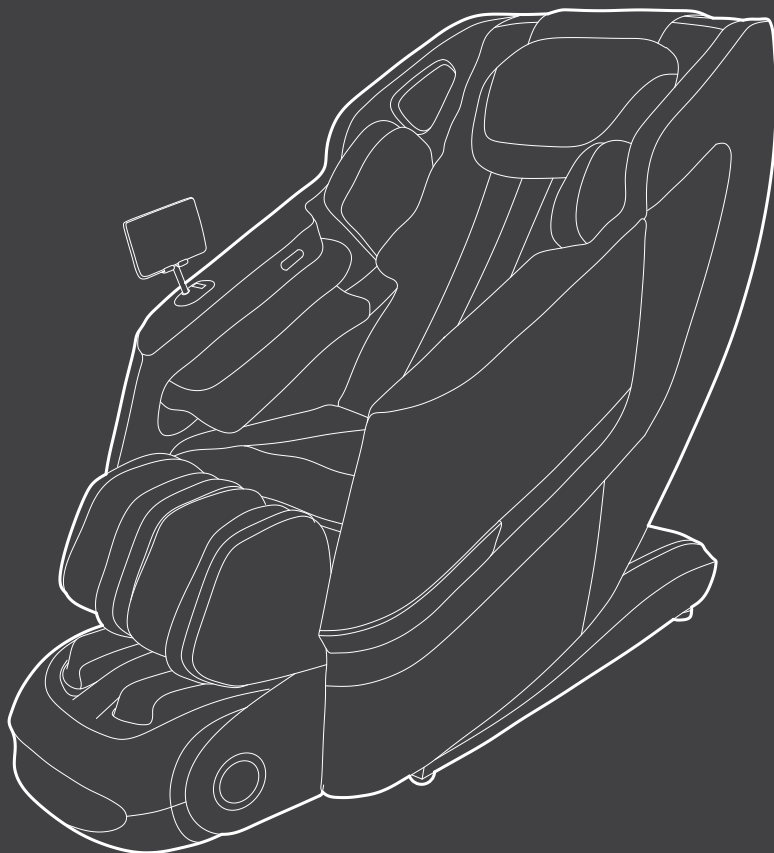

USER MANUAL

REV01

Please read **SAFETY INSTRUCTIONS** carefully before using the chair.

MESSAGE CHAIR

- ◆ 1.Thank you for choosing MC-LUX01 massage chair
 - 2.Please read this manual carefully before using the massage chair
 - 3.Please keep this manual in a safe place for further reference
 - 4.Please pay attention to SAFETY INSTRUCTIONS.
- Note: We reserve the right for design modification. It is subject to change without notice. The pictures in this manual are only for reference. Please refer to the actual product.

CONTENT

Preparation		
Safety Instructions	-----	4
External Structure	-----	8
Internal Structure	-----	9
Installation		
Installation	-----	10
Massage Operation		
Surrounding environment	-----	14
Tablet controller using method	-----	16
Voice control using method	-----	20
Operation	-----	21
Clean and Maintenance		
Cleaning and Maintenance	-----	22
Others		
FAQ and Troubleshooting	-----	23
Technical Data	-----	24

SAFETY INSTRUCTIONS

- ♦ • "Safety Instructions" is provided in both Warning and Caution for important safety information.
- ♦ • Please read all the instructions before using this massage chair.

 WARNING	This sign indicates a hazardous situation which may result in possible death or serious injury.
 CAUTION	This sign indicates a potentially hazardous situation which may result in minor or moderate injury.

Symbol Meaning

	This sign indicates forbidden behavior.		This sign indicates self-disassembly is forbidden.
	This sign indicates the instruction that must be followed to operate massage chair.		This sign indicates proper operation for the cable.

- ♦ • The following should be kept for any further references.

 WARNING		
	• Unsuitable for users with osteoporosis, vertebral fractures, and acute painful diseases such as sprains or muscle strains. • Using other for cardiac patients (including those who have pacemakers or are using other medical electronics). • Unsuitable for cancer patients. • Unsuitable for users with perceptual disorders due to high levels of peripheral circulatory disturbances such as diabetes. • Unsuitable for users with scoliosis. • Unsuitable for users with prolapsed (herniated) disc. • Unsuitable for pregnant women, women who have just delivered baby, and users who are in poor health conditions. • Unsuitable for users with trauma, such as thrombosis, acute varices, and various skin inflammations. • Suggest not to use for users who have thermoregulatory disorders and illnesses related to heat. • Suggest not to use for users with high fever (acute inflammation: such as burn out, chills, blood pressure changes, physical weakness). • Suggest not to use for users who are aged 80 and above. • Use is not advised for individuals with cognitive or physical impairments, impaired consciousness, or those otherwise unable to operate the chair independently. • Unsuitable for users who are in poor physical condition and unable to take care of themselves, such as infants. • Do not use this massage chair with wet hands. • Do not use this massage if you are sensitive or allergic to heat. • Do not fall asleep on this massage chair. People with above symptoms should not use massage chair or use them under doctor's advice. User's discretion is advised	Risk of causing accident or body discomfort.

 WARNING		
	• Before sitting, please confirm that there are no foreign matters in between the parts of massage chair. • When using the backrest, legrest up and down, or legrest extension, be sure to check that there are no people or objects in these areas (behind, under, or in front of the massage chair). • In the event of a physical abnormality or abnormality in use, stop using it immediately and seek for doctor's advice. • Pay attention to the movement of massage rollers around the head and neck as it should not be too much pressure on it. • Avoid excessive neck massage. • Do not massage the abdomen or knees with this massage chair. Stop the massage before you leave the seat or if you want to leave the seat. • Do not use it with other instruments. • Do not allow children or pets to play on or around the massage chair (especially in use); nor can they sit or stand on backrest, armrest or legrest. • Before moving the massage chair, the backrest and legrest must be angled back to their original position.	Accident/injury
	• When assembling, turn off the switch and unplug it after the massage chair returns to its original position. • Insert the power plug into the plug into cord socket. • Make sure the power plug is completely inserted into the power cord socket to reduce the risk of electrification, short circuits or fire. • Unplug the power plug when the massage chair is not in use. • Turn the power switch OFF and unplug the power cord in times of power shortages	Fire and electric shock
	• It is not allowed to fold the cushions of the massage chair for storage. • It is forbidden to conduct no-load running on the massage chair for a long period of time. • This appliance should never be left unattended when plugged in.	Accident
	• Do not use the massage chair if the power cord, plug, or socket is broken or when the receptacle is loose. • Do not use the massage chair other than on the designated voltage. • Do not use the massage chair if the power cord and plug are damaged or not working. • Do not place heavy items on the power cord. • Do not bend, pull, twist, or tie the power cord. • Avoid placing the power cord in places susceptible to high temperatures, such as too close to heating appliances.	Fire and electric shock
	• If the massage chair is faulty, damaged, splashed or dropped, please contact Coway Logistic Technician to repair it. • If power cord or plug is damaged, please do not replace it by yourself. Please contact a Coway Logistic Technician for replacement. • To avoid electric shock or injuries, please do not open or disassemble any parts of the massage chair. Please contact a Coway Logistic Technician to repair it. • If the leather or cushion of massage chair is broken, please stop using the chair and contact a Coway Logistic Technician to repair it.	Disassembly and maintenance

 CAUTION		
	• Please operate the massage chair on a flat or level surface.	To avoid sudden falling.
	• The recommended maximum massage duration is 20 minutes. Continual usage on the same body part may cause an uncomfortable feeling.	Too long time massage is bad for your body.
	• To avoid injury, please check everything to ensure that the head in the correct massage position.	To avoid accidental injury.
	• Tablet controller should be kept in the tablet controller bracket to avoid being crushed or falling damage.	
	• Please make sure that the power switch is "OFF" before inserting the power plug into the power cord socket.	
	• Turn off all controls before removing the power plug from outlet.	To avoid accidents when turning on the power switch.
	• Make sure the power plug is completely inserted into the power cord socket.	To reduce short circuits and any fire hazard.
	• Please check whether there are any damages to the wire to ensure there is no debris or water on the wire.	To avoid electric shock in any leakage or breakdown.
	• Connect the earth wire in the correct way. The power plug must be inserted into the outlet with an earth wire, and the earth wire must not be bent or cut off. 	
	• Do not press the massage rollers with hands or feet. • Do not put hands between the armrests or airbags. • Do not put hands or feet in the gap of mechanical parts. • Do not drop or embed anything into the slot of massage chair. • Do not stand or sit or put anything on the backrest, armrest or legrest. • Do not move the massage chair during operation. • Do not stand on the massage chair during operation. • Do not pull out the power plug or turn off the power during operation. • Do not put your hands or head between legrest or beneath. • Do not use the massage chair whilst wearing hard objects on the head, such as hair ornaments. • Do not put hard objects in pockets for thigh or hip massage. • Do not sit or press on the backrest when the massage chair is in reclining position. • Do not use the massage chair with bare skin to avoid skin irritation or cryogenic burns. • To avoid getting tangled with the massage chair, please do not wear loose clothing or jewellery while using it. • To avoid getting tangled with the massage chair, please tie your hair up and keep your long hair away from moving parts.	To avoid accidents or injuries.
	• Keep the massage chair away from heated surfaces, damp places, sharp objects, corrosive chemicals, inflammable and explosive environments. • Do not use electric blanket or other heating products on the massage chair.	To avoid colour fading, discoloration or deterioration of the massage chair leather.
	• Keep the massage chair away from stove or other heating products. • Keep the massage chair away from dust.	
	• Do not put the massage chair directly exposed to sunlight or in places susceptible to high temperature.	
	• Do not put the massage chair in a small space. • Do not use the massage chair in a poor air circulation space.	
	• Do not use the massage chair outdoors.	


 CAUTION		
	- Do not place or store the massage chair in the places, such as swimming pool, or bathroom. - Please make sure the massage chair and remote control are kept dry all the time. - Do not use the massage chair if user's body is wet.	To avoid electric shock.
	- Please make sure to connect the earth wire in the correct way to avoid electric shock. If you do not know how to connect, please find Coway Logistic Technician. - Do not use plug adapters (If the plug does not match the socket, please do not change the plug by yourself and find Coway Logistic Technician to install a matching socket.)	To avoid electric shock.
	- Unplug the power before cleaning the massage chair. - Unplug the power when not using the massage chair.	To avoid electric shock or fire hazard.
	Unplug the power if there are any damages on the power supply.	
	Hold the plug to unplug the power cord.	To avoid accidents.
	Please turn the power switch "OFF" and unplug the power cord after massaging.	
Please turn the power switch "OFF" and unplug the power cord in times of power shortages.		To avoid damage or accidents when power is switched on again.

GROUNDING INSTRUCTION

- ✦ * The massage chair is equipped with a power cord having a grounding conductor. The plug must be inserted into an appropriate power socket for the massage chair to function.

REPLACE FUSE


- ✦ * When the fuse is burned out, please contact Careline or Coway Logistic Technician to repair it.

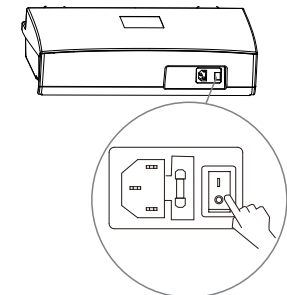


Earth wire is not allowed to be stored in these places

Gas pipe: probably cause explosion or fire.
Phone wire and lightning rod: probably cause electric shock and fire when thundering.
Water pipe: earth wire is useless where there are plastics

EXTERNAL STRUCTURE

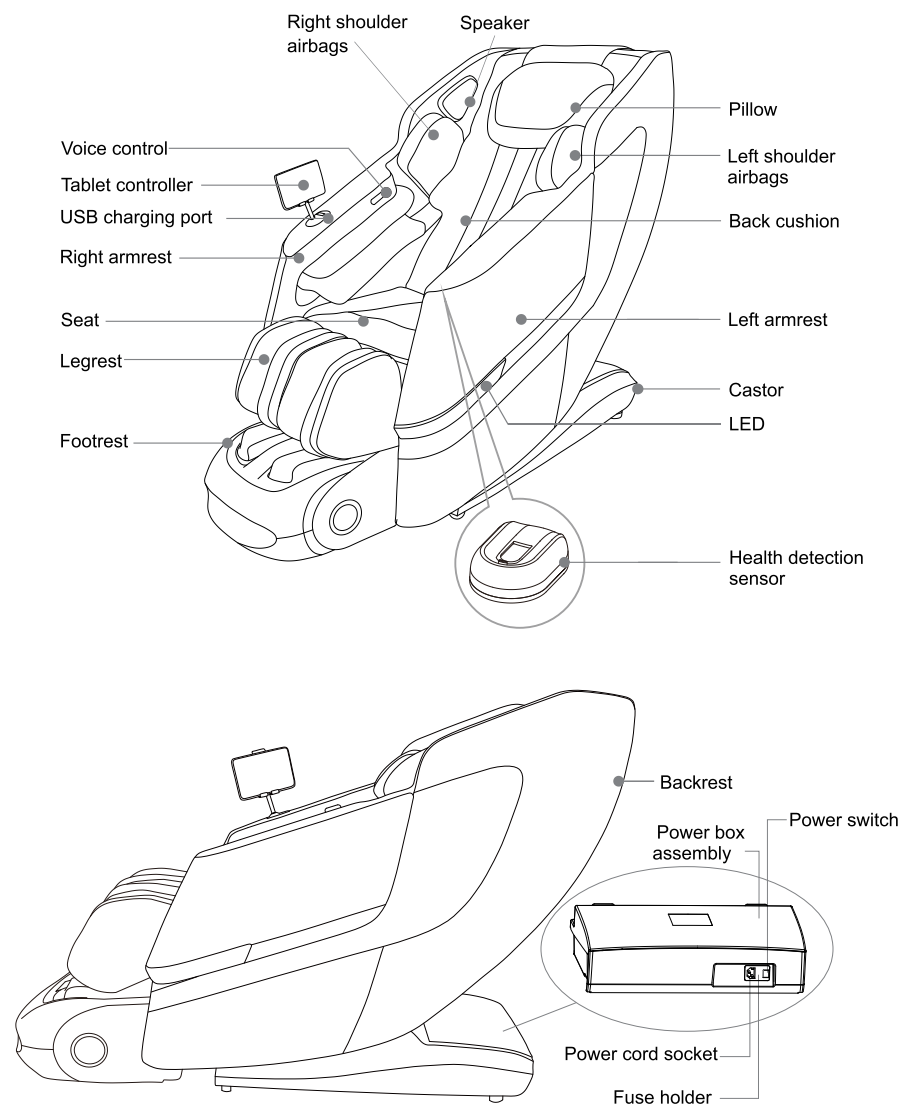


INTERNAL STRUCTURE

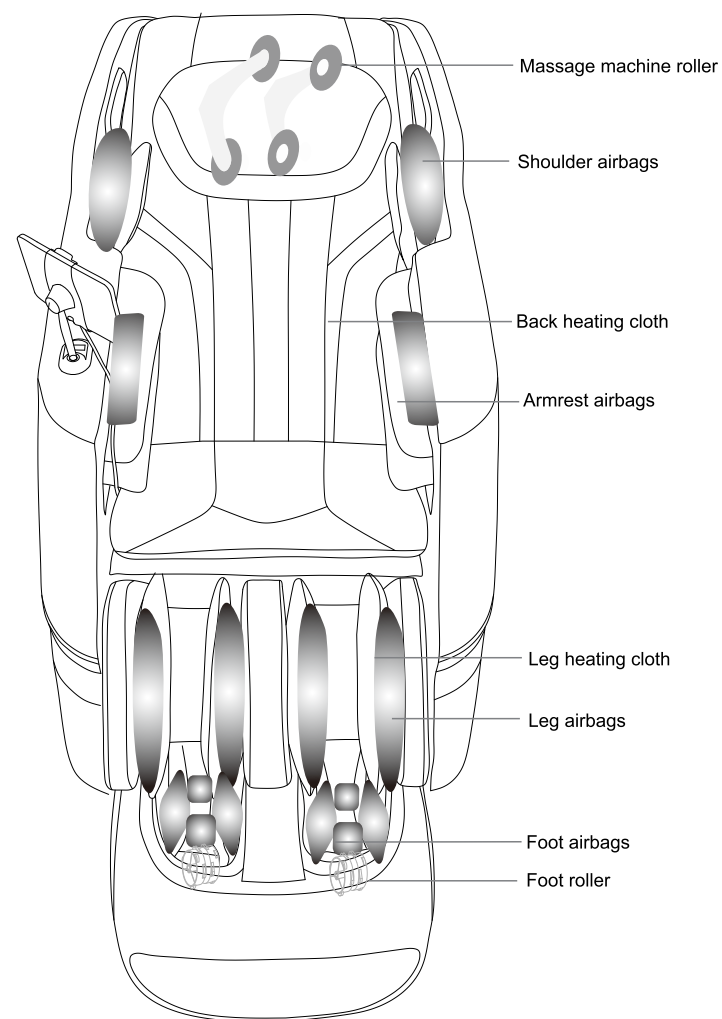

INSTALLATION


Step 1 Take out the main body and accessories from the carton box, and fix the leg & footrest and reset it .

- ❶ Take out the accessory box and the leg & footrest .
- ❷ Carry out the main body of the massage chair .
- ❸ Check and confirm all the accessories .

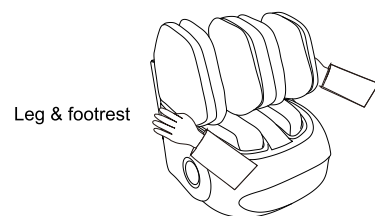


Leg & footrest

Take out the leg & footrest from the carton box by holding left and right sides of the leg & footrest.

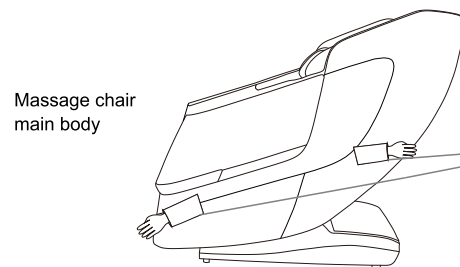

Massage chair main body


Hold the lower part of the armrest and carry out the massage chair slowly.



Tablet controller



Tablet support bracket




Power cord




User manual

CHECK ENVIRONMENT

Make sure there is sufficient space for inclination.

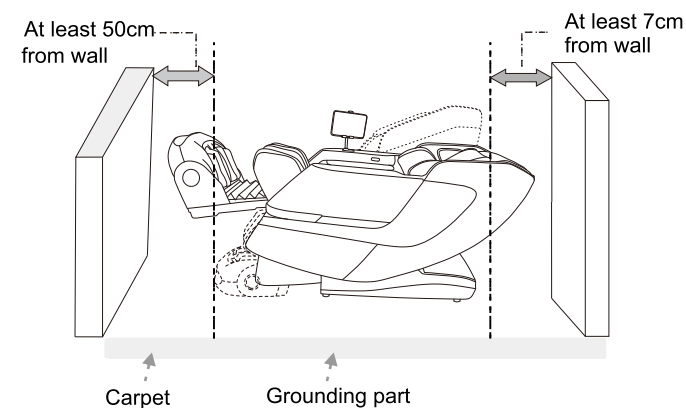

Due to the heavy weight of massage chair, please put a mat, rug, carpet or soft paddings to protect your floor.

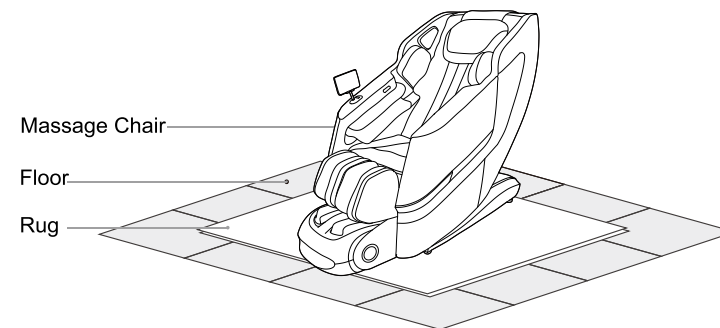

Massage Chair

Floor

Rug



CAUTION


- Do not place the massage chair in wet places such as swimming pool and bathroom to avoid leakage or electric shock.
- Do not place the massage chair under the sun to avoid upholstery deterioration, colour fading and discoloration.
- Do not place the massage chair near to the stove or other heating places to avoid upholstery deterioration.
- Please place the massage chair in a flat surface to avoid massage chair from falling or other unexpected incidents.

STEP 2

leg & footrest

① Twist off the bolt from the metal hanger of the legrest. ② Connect the wire harness joints of the legrest with the corresponding port on the main body. ③ Connect the air tube on the legrest with the corresponding air tube joints on the main body. ④ Open the shaft cover on the metal hanger, lift the footrest, put the shaft into the hanger of the main body, put down the shaft cover. ⑤ Tighten the screw;


⚠ Note: Ensure the air tube and wire harness are not twisted together when plug the air tube and wire harness .

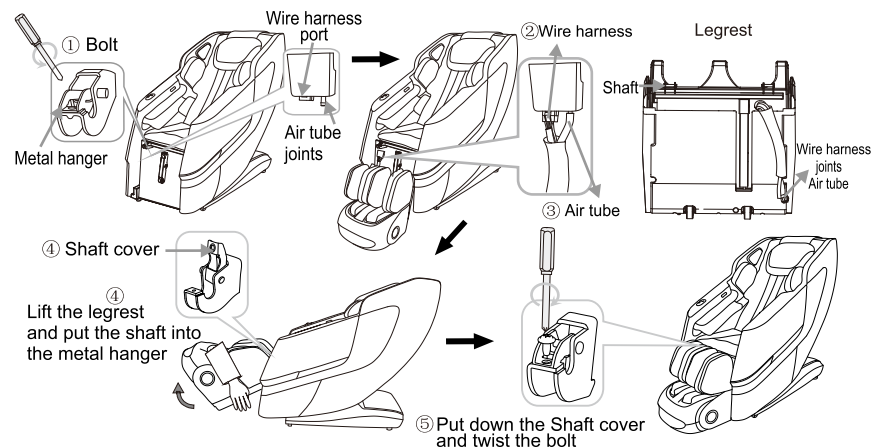

STEP 3

Fix the tablet controller bracket and tablet controller

① Insert the tablet controller bracket into the socket on the right armrest, according to the shape of the socket hole, until the bottom screw of the bracket snaps into place. ② Align the concave position of the hand control plug with the convex position of the hand control wire socket on the right side of the seat, connect them together, and then tighten the nut. ③ Put the tablet controller on the bracket .

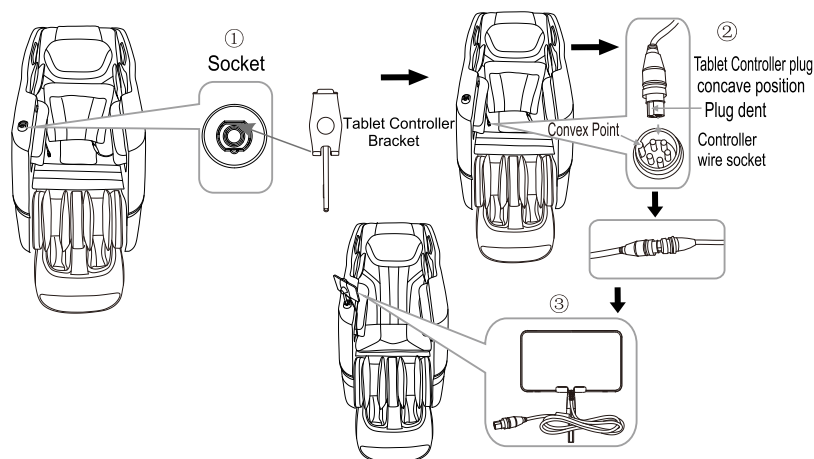


STEP 4

Connect heating cloth and install back cushion

Connect back heating cloth first, then connect the back cushion with zipper.

★ Recommendation

When the person sits on the chair, making the bottom of the pillow level with the ears, then connect pillow to back cushion. This way, the massage will be more accurate, and it will achieve a comfortable massage effect.

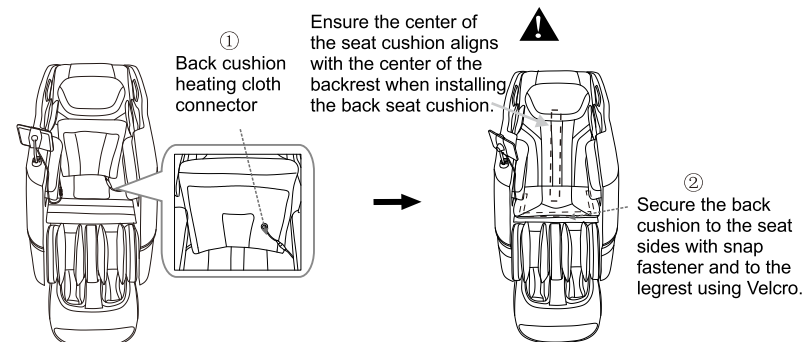


STEP 5

After assembling

- ① Insert the cable line into the socket.
- ② Insert the plug of cable line into the socket.
- ③ Turn on the switch behind the power box (switch "ON/OFF", "O/I", press "I" to turn it on).
- ④ Use the tablet controller to choose massage functions.

⚠ Make sure the switch is OFF before inserting the cable line into the socket.

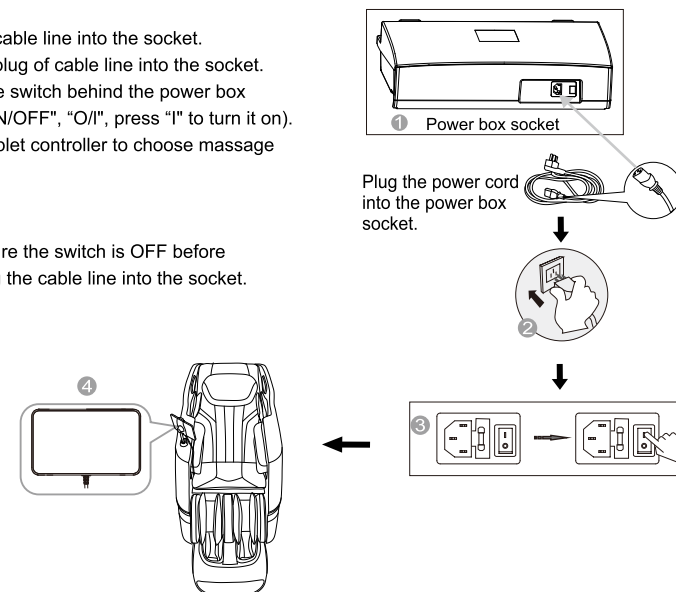

SURROUNDING ENVIRONMENT

CAUTION



Don't use the chair in wet places like such as bathrooms or near swimming pools to avoid leakage or electric shock.




Don't use under sunlight or near stove or other heating place to avoid upholstery deteriorated.



Please use chair in flat place to avoid chair falling or noise or other unexpected trouble.


Power Cord And Plug

Check the areas when back and leg extending, make sure no people, pets or other things around.

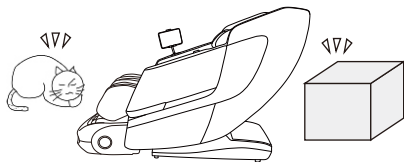

Check Power Cord And Plug


1. Use dry cloth to clean the dust on plug regularly.
2. Do not bend, pull, twist, or tie the power cord.

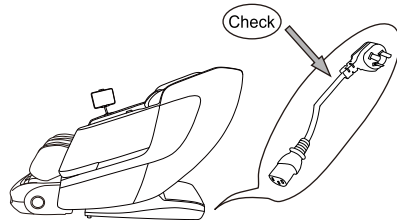

Available Space To Place The Massage Chair

● Space size for using the chair

- At least 7cm for the backrest from the wall.

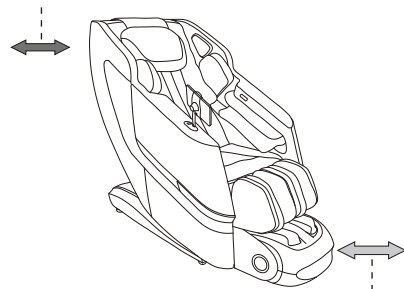


- At least 50cm in front of the leg.

Check The Surroundings

When the backrest or legrest reclines or extends, please pay attention to:

1. Check any person or things in every direction.
2. Check the space size.

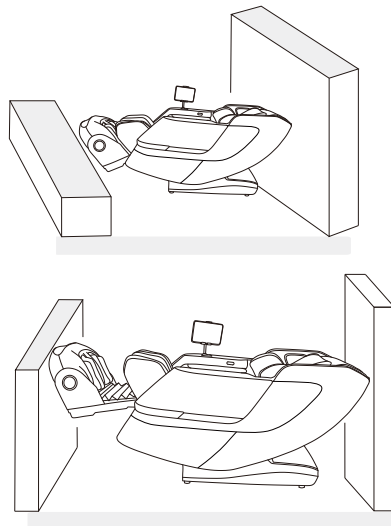

MOVING METHODS

CAUTION

- ◆ Do not move the massage chair when it is working to avoid any accidents or damages.

Floor Protection

Bind the cords and put them on the seat to avoid damage while moving the massage chair.

Do not drop or let go of the massage chair out of a sudden while moving the massage chair.

Do not move the massage chair on a wooden floor, rough surface or in a narrow space.


Do not move the massage chair without the assistance of Coway Logistic Technician.

Make sure to turn off the power switch and unplug the cord before moving the massage chair.



Moving The Massage Chair

Press down on the head part so that the chair falls backwards and stands on its back castors. Then, push the massage chair to desired destination steadily and set it down slowly.

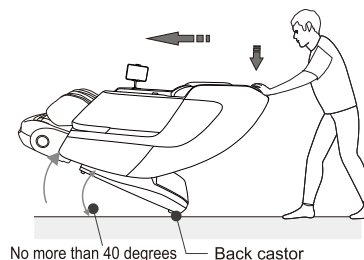

Please hold the footrest while moving the massage chair to protect the leather from scratches.


To carry this product, please do not lift the armrest.

ADJUSTMENT BEFORE MESSAGE

Make sure the massage rollers stop at the upper part of backrest. Then, you may slowly sit on the massage chair to enjoy the massage.

The wrong position of rollers might cause injuries.

If the massage roller cannot detect the shoulder position, it will default the massage rollers to the highest position of the user's shoulder.

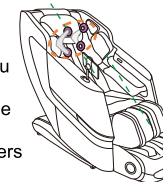

Right position

Rest your back on the backrest and your head on the head cushion.


The massage chair will release three "beep" sounds after the shoulder detection has finished.

To make slight adjustments, you may press "UP/DOWN" button on the tablet controller.



A wrong detection of the user's shoulder position may affect the massage comfort.

Recommendation

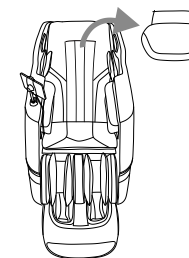

- When you feel the neck massage is not strong enough, you may remove the head cushion.

TABLET CONTROLLER USING METHOD

Tablet Controller



1. After the chair is powered on, the tablet turns on by default and displays the boot screen. If no operation is performed for more than 2 minutes, the tablet controller will enter the screen-off state.

Auto Program Interface



- Power Button:** When you click this button, the icon will light up. After turning on, you can use the massage chair.
- Auto Program Button:** Press to enter the auto program selection interface.
- Manual Program Button:** Press to enter the manual program selection interface.
- Customized Program Button:** Press to access the customized program interface.
- Settings Button:** Press to enter the settings interface.
- End Rest Button:** Select this button, massage chair will not return to its original position after the massage program has ended.
- Health Detection Button:** Press to enter the health detection interface.

Status Interface




- Home Page:** Press to access the operation status page.
- Zero Gravity:** Tap to enter the zero-gravity angle mode. Tap the selected zero-gravity button to trigger reset.
- 4D Intensity:** Press to switch and adjust the intensity of the 4D massage mechanism.
- Footrest Twist & Foot Roller:** Press to enable or disable the footrest twist and foot roller functions. If the air pressure function is not activated in advance, the leg and foot air pressure will be turned on automatically when the foot roller or footrest twist is enabled.
- Position Adjustment:** Press different angle adjustment buttons to adjust the backrest angle, footrest angle, and leg extension length.
- Air Intensity:** Press this button to switch and adjust the air pressure intensity.
- Heating:** Press to control the heating temperature.
- Countdown Timer:** The countdown timer is displayed at the bottom right corner of the status page, which starts counting down once the program is activated.

Manual Message Interface



- Message Method:** Press to select the desired message method.
- Range:** Up/Down Adjustment: Enter manual message mode to switch message zones; activate fixed-point mode to move the upper massage mechanism up and down.
- Width:** Message Mechanism Manual Width Switch Button: Enter manual message mode to switch the width of the massage machine.
- Zone:** Air Bag Zone: Press to switch between air pressure massage zones.
- Intensity:** Air Bag Intensity.
- 4D Intensity & Speed Switch:** Manual 4D Intensity & Speed Switch Button for Massage Machine.
- Heating:** Press Heat to adjust heating temperature.
- Foot Roller & Ankle Flex On/Off Switch:**
- Posture Adjustment Switch:**

Interface 1

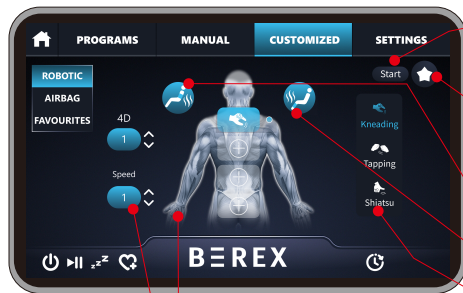

Personalized Customization Zone Selection Button: Four zones (Neck & Shoulder, Back, Waist, Hip) are available for selection; the selected zone will display a corresponding prompt. When entering the personalized customization interface from other interfaces, the previously selected zones and their statuses will be retained.

After selecting the desired massage options, press the Start key to confirm and start the personalized custom massage program.

Favorite Button: Tap it to save the personalized custom program that is currently running. A maximum of 8 programs can be saved, and the saved programs will be retained even when the power is turned off.


Waist Heating.

Calves Heating.

Massage Mode & Method Selection Menu: Kneading, Tapping and Shiatsu.

4D & Massage Machine Speed Settings: 3 Levels by Default.

Interface 2

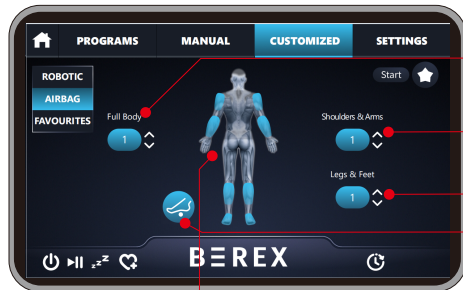

Personalized Customization Air Pressure Zone Selection: Different air pressure massage zones are selectable; the air pressure intensity will default to 3 levels after a zone is chosen.


Full-Body Air Pressure Intensity Settings: 3 Levels by Default.

Upper-Body Air Pressure Intensity Settings: 3 Levels by Default.

Lower-Body Air Pressure Intensity Settings: 3 Levels by Default.

Foot Roller Speed Settings: 2 Levels.

Settings Interface

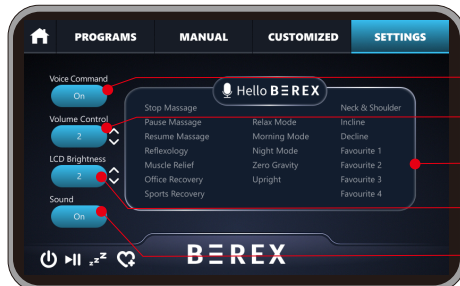

Voice On/Off Button.

Volume Control: 3 Volume Levels Adjustable.

Voice Command Phrase Display.

LCD Brightness Adjustment: 3 Levels Adjustable.

Key tone sound On/Off Switch.

Health Detection Interface




Extend your finger towards the sensor and cover the groove.

Tap the "Start" button to start scanning.

During the scanning process, adjust your posture, relax and maintain even breathing.

Start Detection Button: Press to initiate detection.

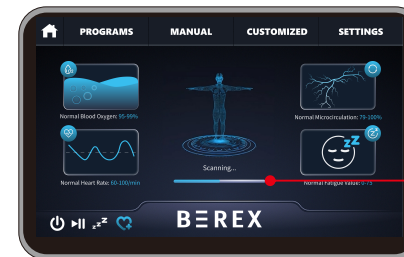

Scanning status.




Blood Oxygen, Microcirculation, Heart Rate, Fatigue Value, data will be displayed after the detection is completed.


Recommended Programs.

Retest: Press this button to perform the physiological detection again.

Shoulder Height Detection Interface

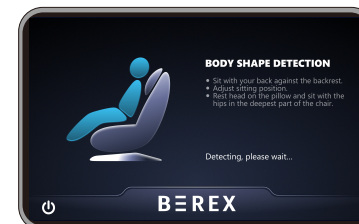

After the shoulder height detection is completed, an up-and-down adjustment interface will pop up.

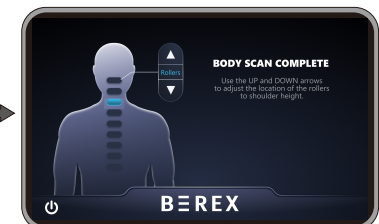


VOICE CONTROL USING METHOD

● Smart Voice Control using method

When massage chair is in standby mode, press the "BEREX" LOGO on display, then massage chair enter the startup state.

By default, the voice control function is off when the power is turned on. Press the Voice Command button to enable voice control; press it again to disable it.

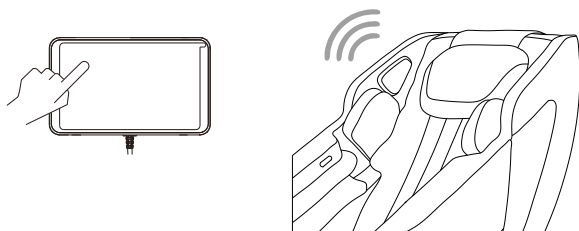

- When using the voice recognition function, it is necessary to say the wake-up word "Hello, BEREX" before the system can recognize the subsequent voice control words. After the voice control mode is activated, if no voice control words are given within 8 seconds, the voice mode system shuts down automatically.
- After the massage chair recognises the voice control words, there will be corresponding speaker voice feedback, indicating that the voice command recognition is successful. If there is no voice feedback from the speaker, the voice command recognition fails or the current status does not support this function .

● Voice control words :


Awakening words: "Hello, BEREX"

- | | | | |
|---------------------|--------------------|--------------------|-----------------|
| 1. Stop Massage | 2. Pause Massage | 3. Resume Massage | 4. Reflexology |
| 5. Muscle Relief | 6. Office Recovery | 7. Sports Recovery | 8. Relax Mode |
| 9. Morning Mode | 10. Night Mode | 11. Zero Gravity | 12. Upright |
| 13. Neck & Shoulder | 14. Incline | 15. Decline | 16. Favourite 1 |
| 17. Favourite 2 | 18. Favourite 3 | 19. Favourite 4 | |


If no response, please try again louder after 2 seconds .

OPERATION


- 1 Make sure there is no people or pet or anything within the range of backrest and legrest.

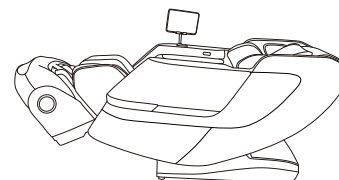


- 2 Make backrest and legrest restore to the normal position by controller pressing the ON/OFF button to make backrest and legrest restore to the normal position

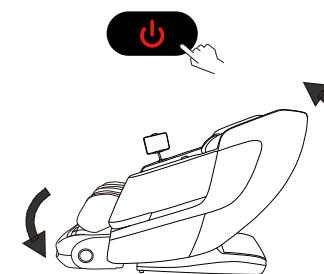


- 3 After the chair is returns to its original position, put the tablet controller back on the right armrest.

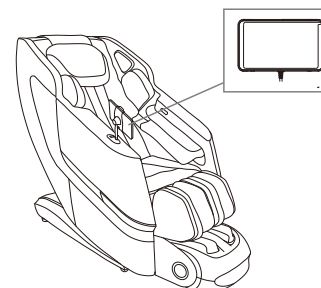

- 4 Switch off the power.

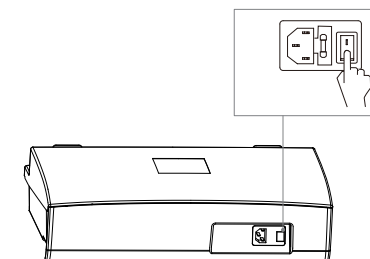

- 5 Unplug the electricity from the socket. (Attention: hold the right plug position)

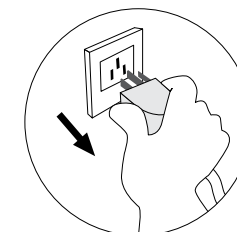

- 6 Clean the chair if necessary.

⚠ ATTENTION!

- After using, press ON/OFF to end all the massage programs and wait for restoration. Make sure to cut the electricity to avoid any unexpected injury to children or pets.
- After using, turn off the power, unplug the electricity. Avoid moisture, dirt and aging of insulation to prevent damage.



SYNTHETIC LEATHER

General cleaning

Clean the massage chair with a soft and dry cloth.




Do not use a thinner, gasoline, alcohol or other chemical materials.

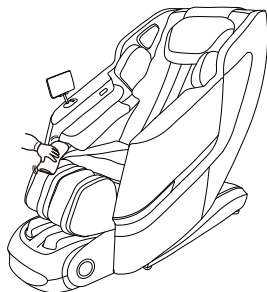

If leather is dirty

- 1 Dip the soft cloth, squeeze it and clean the stain on the surface gently.
- 2 Wash cloth, squeeze it and wipe the leather surface again.
- 3 Clean it with a soft dry cloth.
- 4 Allow to dry (air blower is prohibited)

CLOTH MATERIAL

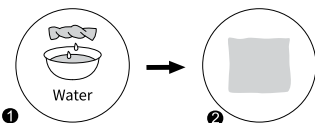


- 1 Dip cloth into weak neutral detergent, squeeze it and clean the material surface. Do not use thinner, gasoline, alcohol or other chemical materials.
- 2 Allow to dry.

PLASTIC PART



- 1 Dip the soft cloth, squeeze it and clean the plastic part.
- 2 Allow it to dry.

TABLET CONTROLLER

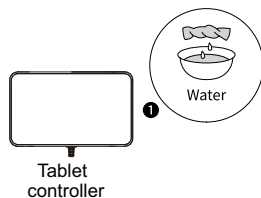

- 1 Wipe with soft cloth after squeezing.
- 2 Allow to dry. Propellant, diluent or alcohol are prohibited.

ABOUT MASSAGE CHAIR CLEANING



- Before cleaning, unplug the electricity, don't touch plug with wet hands.
- Make sure hands are dry when plugging to the socket.
- If failed to follow the mentioned instruction, user may get electric shock or burned.

FAQ AND TROUBLESHOOTING

Problem/Issues	Possible Reason	Troubleshooting
The massage chair can't work after power is on.	Check if the control switch is on or not.	Open control switch
	No massage function was selected	Select massage function
	Check whether the plug and socket is poorly connected	Make sure plug and socket are connected.
	Wire or plug is damaged.	Please ask manufacturer or appointed or authorized maintenance personnel for checking and replacement.
	The fuse burned out.	Replace fuse of same specification.
	Something wrong with inner circuit	Please ask appointed or authorized maintenance personnel for checking and repairing.
There is beep sound inside the massager while working.	It is sound of air pump, motor and mechanical parts.	Normal sound, no need to pay attention to it.
Different height of the left roller and right roller.	Massage rollers work on shifts.	Normal, no need to pay attention to it.
Sound suddenly becomes much louder while working.	Check if it is due to prolonged use.	Turn off power to have the massager rest for over half an hour before next usage.
	Inner parts fretted away due to prolonged use. It's normal	Please ask appointed or authorized maintenance personnel for checking and repairing.
Massage function suddenly stops while working.	Suddenly power-down	Connect the electricity power again
	Setting time is up.	Turn off the power to have the massager rest for over half an hour before next usage working.
Neither the backrest nor the legrest can be lay down.	Check if there are any obstacles; the chair overloads; for the sake of safety, sometimes the massage machine may automatically stop working. There are heavy things on power box.	Remove the obstacles; turn of the power to have the massager rest for over half an hour before next usage.
The chair can't return to its original position.	Excessive operation; setting time is up.	Please ask manufacturer or appointed or authorized maintenance personnel for checking and replacement.
Electric wire or plug give out heat	It may work overload	Turn off the power to have the massager rest for over half an hour before next usage.
	Other abnormal case	Stop using and ask appointed maintenance personnel for help.



Note: If the troubles are not caused by above reasons, please turn off the power switch and cut off the power, then contact the manufacturer or service agent to repair your chair

TECHNICAL DATA

Name	SENNO PLUS
Model	MC-LUX01
Input Voltage	220-240V~ 50/60Hz
Safety Design	Class 1
Power	150W
Net Weight / Gross Weight	94.7/112.7 kg
Packing Size	1315x790x1185mm(LxWxH)

Make your life healthy and beautiful every day!