


MASSAGE CHAIR

COWAY

MC-ST01B

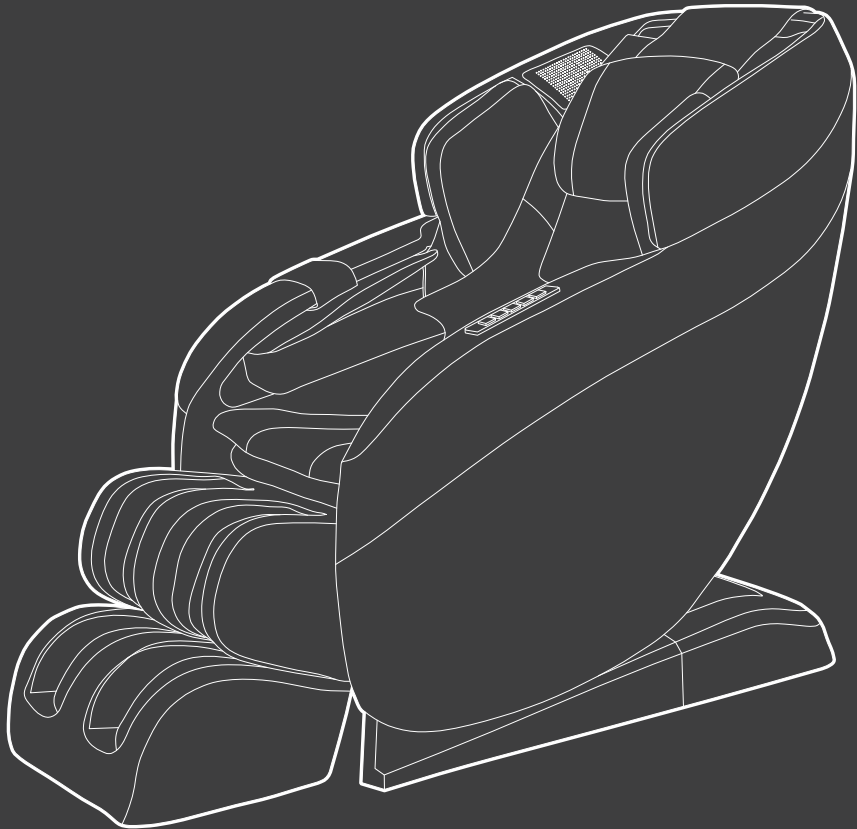

USER MANUAL ►

Please read **SAFETY INSTRUCTIONS** carefully before using the chair.

MASSAGE CHAIR MC-ST01B

PRODUCT FEATURES

1. This massage chair has been modified for a quiet massage feeling, which comes with a variety of massage techniques such as kneading, knocking, tapping, shiatsu and kneading-tapping that mimics a real massage therapist's technique.
2. It has the feature of body scanning which can precisely massage your body based on different heights and sizes.
3. The purpose of elderly-friendly buttons is to provide convenience and enable users to experience the real zero gravity feature with just one touch.
4. With space-saving technology, you only need 5cm of free space between the massage chair and the wall to enjoy your massage with limited space.
5. With the combination of massage rollers and airbags on the feet, it stimulates the reflex zones of the feet which can unclog the meridians and regulate the joints.
6. With the additional of 4 massage rollers and airbags on the calves, it provides the benefits of relieving muscle tightness, improving blood circulation and flexibility.
7. The air compression massage helps to increase blood circulation and improve the lymphatic system.
8. The leg rest can be extended and retracted within the range of 22cm which is suitable for users below 100kg and between 155cm to 185cm.
9. With the elderly-friendly buttons on the armrest and high-resolution LCD screen on the remote control, you can easily operate the massage settings.
10. This massage chair has a built-in Bluetooth speaker which allows you to play music from any devices via Bluetooth connection.
11. With the combination of massage techniques and heat therapy, it helps to improve blood circulation and ease back pain.
12. With a hidden USB port at the left armrest, you may charge your phone while enjoying the massage.

- ◆ 1. Thank you for choosing Coway Massage Chair.
- 2. Please read this manual carefully before use.
- 3. Please keep this manual in a safe place for further reference.
- 4. Please pay attention to SAFETY INSTRUCTIONS.

Note: We reserve the right for any design modification. It is subject to change without notice.
The images in this user manual are only illustrated for reference. Please refer to the actual product.



CONTENT

Preparation	
Safety Instructions	4
External Structure	8
Internal Structure	9
Installation	
Installation	10
Preparation Before Using	
Surrounding Environment	14
Moving Methods, Adjustment Before Massage	15
Message Operation	
Remote Control	16
LCD Display Graphic Descriptions	18
Elderly-Friendly Buttons	20
Operation Instruction and Function Illustration	
ON/OFF	22
Function Illustration	23
After Massage	
Restoration of Massage Chair	24
Clean and Maintenance	
Cleaning and Maintenance	25
Others	
FAQ and Troubleshooting	26
Technical Data	27





Please keep this manual in a safe place for future reference.

SAFETY INSTRUCTIONS



- ◆ • “Safety Instructions” is provided in both Warning and Caution for important safety information.
- ◆ • Please read all the instructions before using this massage chair.

 WARNING	This sign indicates a hazardous situation which may result in possible death or serious injury.
 CAUTION	This sign indicates a potentially hazardous situation which may result in minor or moderate injury.




Symbol Meaning


	This sign indicates the forbidden behavior.		This sign indicates self-disassembly is forbidden.
	This sign indicates the instruction that must be followed to operate massage chair.		This sign indicates proper operation for the cable.





- ◆ • The followings should be kept for further references.





 WARNING		
	<ul style="list-style-type: none"> • Unsuitable for users with osteoporosis, vertebral fractures, and acute painful diseases such as sprains or muscle strains. • Unsuitable for cardiac patients (including those who have pacemakers or are using other medical electronics). • Unsuitable for cancer patients. • Unsuitable for users with perceptual disorders due to high levels of peripheral circulatory disturbances such as diabetes. • Unsuitable for users with scoliosis. • Unsuitable for users with prolapsed (herniated) disc. • Unsuitable for pregnant women, women who have just delivered baby, and users who are in poor health conditions. • Unsuitable for users with trauma, such as thrombosis, acute varices, and various skin inflammations. • Suggest not to use for users who have thermoregulatory disorders and illnesses related to heat. • Suggest not to use for users with high fever (acute inflammation: such as burnout, chills, blood pressure changes, physical weakness). • Suggest not to use for users who are aged 80 and above. • Suggest not to use for users with impaired consciousness, mentally handicapped, and incapable to operate massage chair. • Suggest not to use for users with physically incapable to take care of themselves, such as infants. • Do not use this massage chair with wet hands. • Do not use this massage if you are sensitive or allergic to heat. • Do not fall asleep on this massage chair. <p>People with above symptoms should not use massage chair or use them under doctor's advice. User's discretion is advised.</p>	Risk of causing accident or body discomfort.

 **WARNING**

	<ul style="list-style-type: none"> • Before sitting, please confirm that there are no foreign matters in between the parts of massage chair. • When using the backrest, calf up and down, or calf extension, be sure to check that there are no people or objects in these areas (behind, under, or in front of the massage chair). • In the event of a physical abnormality or abnormality in use, stop using it immediately and seek for doctor's advice. • Pay attention to the movement of massage rollers around the head and neck as it should not be too much pressure on it. • Avoid excessive neck massage. • Do not massage the abdomen or knees with this massage chair. • Stop the massage before you leave the seat or if you want to leave the seat. • Do not use it with other instruments. • Do not allow children or pets to play on or around the massage chair (especially in use); nor can they sit or stand on backrests, armrests or leg rest. • Before moving the massage chair, the backrest and leg rest must be angled back to their original position. 	<p>Accident / injury.</p>
	<ul style="list-style-type: none"> • When assembling, turn off the switch and unplug it after the massage chair returns to its original position. • Insert the power plug into the power cord socket. • Make sure the power plug is completely inserted into the power cord socket to reduce the risk of electrification, short circuits or fire. • Unplug the power plug when the massage chair is not in use. • Turn the power switch OFF and unplug the power cord in times of power shortages. 	<p>Fire and electric shock.</p>
	<ul style="list-style-type: none"> • It is not allowed to fold the cushions of the massage chair for storage. • It is forbidden to conduct no-load running on the massage chair for a long period of time. • This appliance should never be left unattended when plugged in. • Do not use the massage chair if the power cord, plug, or socket is broken or when the receptacle is loose. • Do not use the massage chair other than on the designated voltage. • Do not use the massage chair if the power cord and plug are damaged or not working. • Do not place heavy items on the power cord. • Do not bend, pull, twist, or tie the power cord. • Avoid placing the power cord in places susceptible to high temperatures, such as too close to heating appliances. 	<p>Accident.</p> <p>Fire and electric shock.</p>
	<ul style="list-style-type: none"> • If the massage chair is faulty, damaged, splashed or dropped, please contact Coway Logistic Technician to repair it. • If power cord or plug is damaged, please do not replace it by yourself. Please contact a Coway Logistic Technician for replacement. • To avoid electric shock or injuries, please do not open or disassemble any parts of the massage chair. Please contact a Coway Logistic Technician to repair it. • If the leather or cushion of massage chair is broken, please stop using the chair and contact a Coway Logistic Technician to repair it. 	<p>Disassembly and maintenance.</p>

 **CAUTION**

	<ul style="list-style-type: none"> • Please operate the massage chair on a flat or level surface. 	To avoid sudden falling.	
	<ul style="list-style-type: none"> • The recommended maximum massage duration is 20 minutes. Continual usage on the same body part may cause an uncomfortable feeling. 	Too long time massage is bad for your body.	
	<ul style="list-style-type: none"> • To avoid injury, please check everything to ensure that the head in the correct massage position. 	To avoid accidental injury.	
	<ul style="list-style-type: none"> • Remote control should be kept in the remote control pocket to avoid being crushed or falling damage. 		
	<ul style="list-style-type: none"> • Please make sure that the power switch is “OFF” before inserting the power plug into the power cord socket. 	To avoid accidents when turning on the power switch.	
	<ul style="list-style-type: none"> • Turn off all controls before removing the power plug from outlet. 		
	<ul style="list-style-type: none"> • Make sure the power plug is completely inserted into the power cord socket. 	To reduce short circuits and any fire hazard.	
	<ul style="list-style-type: none"> • Please check whether there are any damages to the wire to ensure there is no debris or water on the wire. 	To avoid electric shock in any leakage or breakdown.	
<ul style="list-style-type: none"> • Connect the earth wire in the correct way. The power plug must be inserted into the outlet with an earth wire, and the earth wire must not be bent or cut off.  			
	<ul style="list-style-type: none"> • Do not press the massage rollers with hands or feet. • Do not put hands between the armrests or airbags. • Do not put hands or feet in the gap of mechanical parts. • Do not drop or embed anything into the slot of massage chair. • Do not stand or sit or put anything on the backrest, armrest or leg rest. • Do not move the massage chair during operation. • Do not stand on the massage chair during operation. • Do not pull out the power plug or turn off the power during operation. • Do not put your hands or head between leg-rest or beneath. • Do not use the massage chair whilst wearing hard objects on the head, such as hair ornaments. • Do not put hard objects in pockets for thigh or hip massage. • Do not sit or press on the backrest when the massage chair is in reclining position. • Do not use the massage chair with bare skin to avoid skin irritation or cryogenic burns. • To avoid getting tangled with the massage chair, please do not wear loose clothing or jewellery while using it. • To avoid getting tangled with the massage chair, please tie your hair up and keep your long hair away from moving parts. 	To avoid accidents or injuries.	
		<ul style="list-style-type: none"> • Keep the massage chair away from heated surfaces, damp places, sharp objects, corrosive chemicals, inflammable and explosive environments. • Do not use electric blanket or other heating products on the massage chair. 	To avoid colour fading, discoloration or deterioration of the massage chair leather.
		<ul style="list-style-type: none"> • Keep the massage chair away from stove or other heating products. 	
		<ul style="list-style-type: none"> • Keep the massage chair away from dust. 	
		<ul style="list-style-type: none"> • Do not put the massage chair directly exposed to sunlight or in places susceptible to high temperature. 	
		<ul style="list-style-type: none"> • Do not put the massage chair in a small space. 	
	<ul style="list-style-type: none"> • Do not use the massage chair in a poor air circulation space. 		
	<ul style="list-style-type: none"> • Do not use the massage chair outdoors. 		


 CAUTION		
	<ul style="list-style-type: none"> Do not place or store the massage chair in the places, such as swimming pool, or bathroom. Please make sure the massage chair and remote control are kept dry all the time. Do not use the massage chair if user's body is wet. 	To avoid electric shock.
	<ul style="list-style-type: none"> Please make sure to connect the earth wire in the correct way to avoid electric shock. If you do not know how to connect, please find Coway Logistic Technician. Do not use plug adapters (If the plug does not match the socket, please do not change the plug by yourself and find Coway Logistic Technician to install a matching socket.) 	To avoid electric shock.
	<ul style="list-style-type: none"> Unplug the power before cleaning the massage chair. Unplug the power when not using the massage chair. 	To avoid electric shock or fire hazard.
	<ul style="list-style-type: none"> Unplug the power if there are any damages on the power supply. 	
	<ul style="list-style-type: none"> Hold the plug to unplug the power cord. 	To avoid accidents.
	<ul style="list-style-type: none"> Please turn the power switch "OFF" and unplug the power cord after massaging. 	To avoid damages or accidents when the power is switched on again.
	<ul style="list-style-type: none"> Please turn the power switch "OFF" and unplug the power cord in times of power shortages. 	


GROUNDING INSTRUCTION

- ✦ ✖ The massage chair is equipped with a power cord having a grounding conductor. The plug must be inserted into an appropriate power socket for the massage chair to function.



REPLACE FUSE

- ✦ ✖ When the fuse is burned out, please contact Careline or Coway Logistic Technician to repair it.

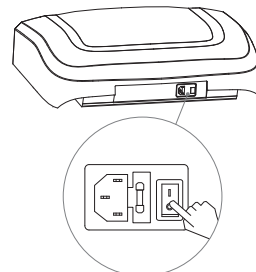


 Earth wire is not allowed to be stored in these places.	Gas pipe: might cause explosion or fire. Phone wire and lightning rod: might cause electric shock and fire when thundering. Water pipe: earth wire is useless where there are plastics.
--	---

EXTERNAL STRUCTURE

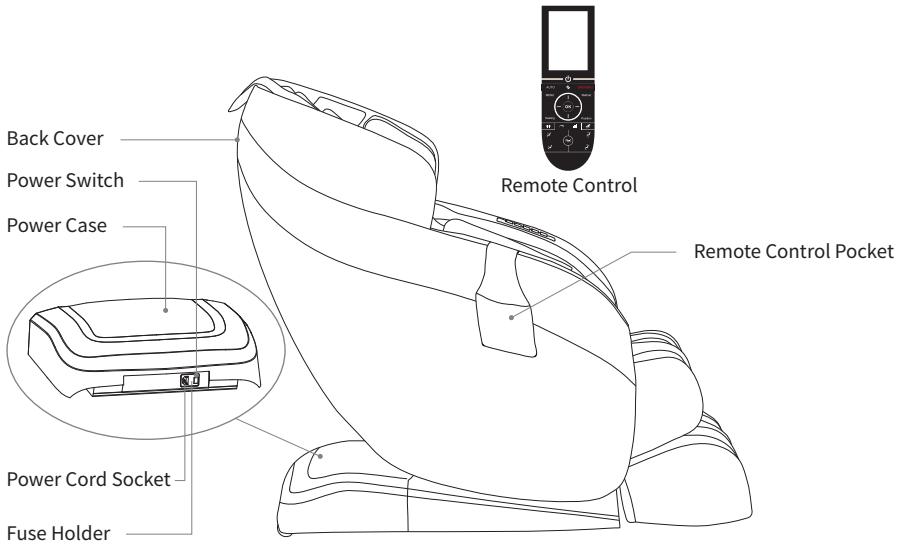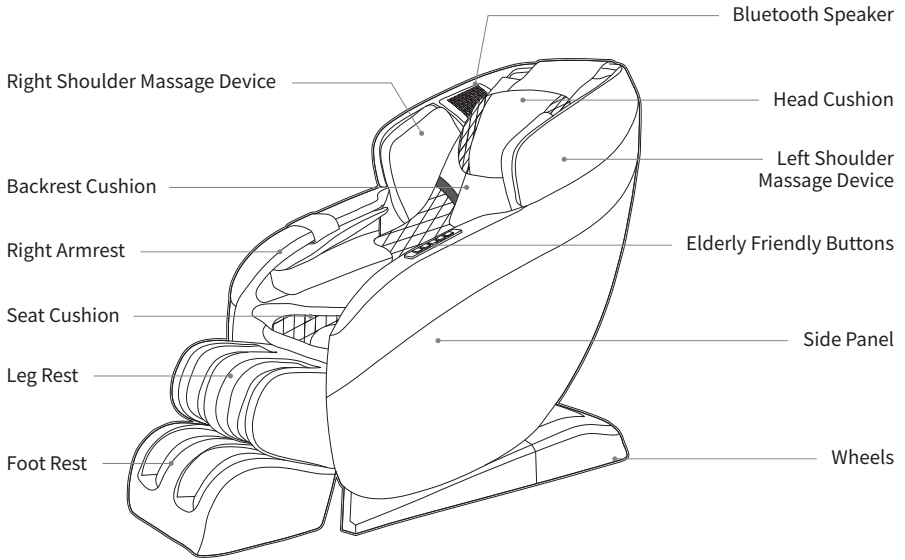

INTERNAL STRUCTURE

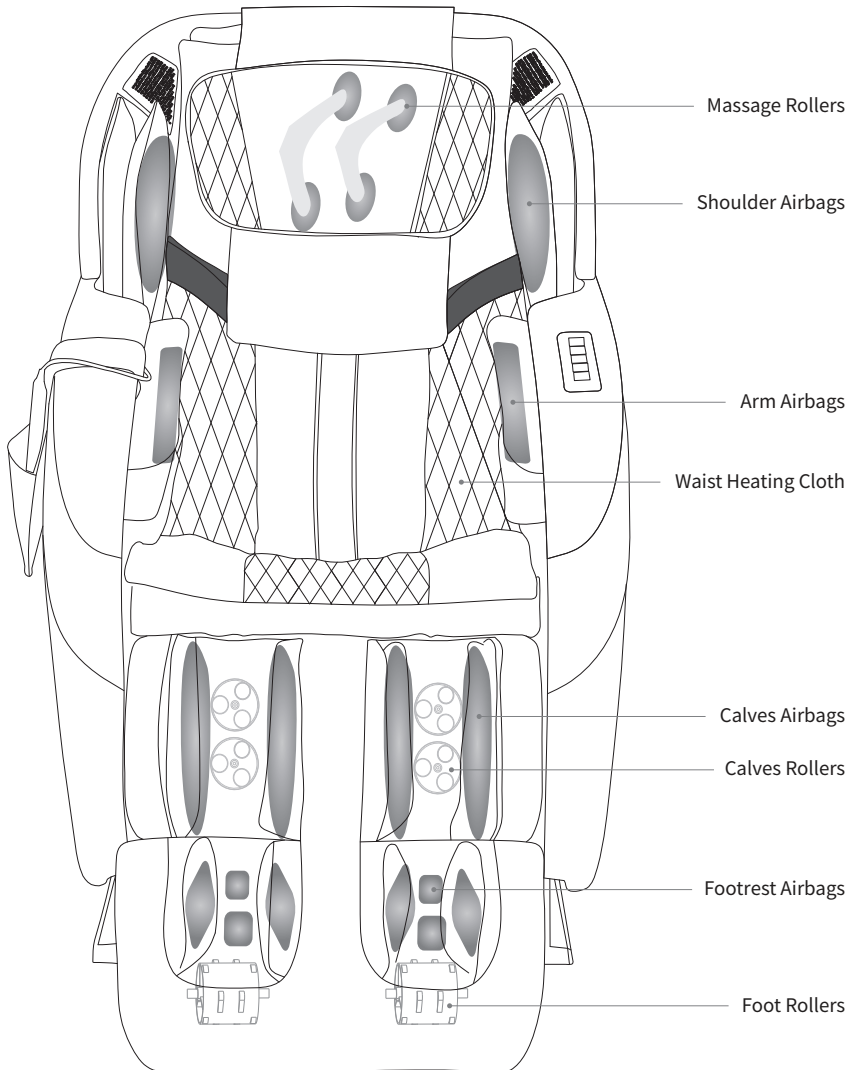


INSTALLATION

STEP 1


Take out the main body and accessories from the carton box.

- ❶ Take out the accessory box and the leg rest.
- ❷ Carry out the main body of the massage chair.
- ❸ Check and confirm all the accessories.

Take out the leg rest from the carton box by holding left and right sides of the leg rest.

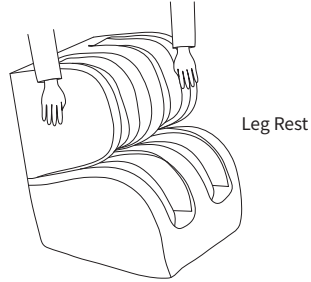

Massage Chair Main Body

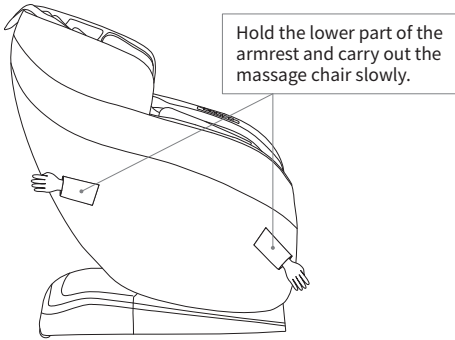

The Accessories



Electric Power Cable




User Manual

STEP 2


Place the remote control into the remote control pocket.

- ❶ Remove the remote control pocket from the right side inner arm airbags.
- ❷ Put the remote control into the remote control pocket.

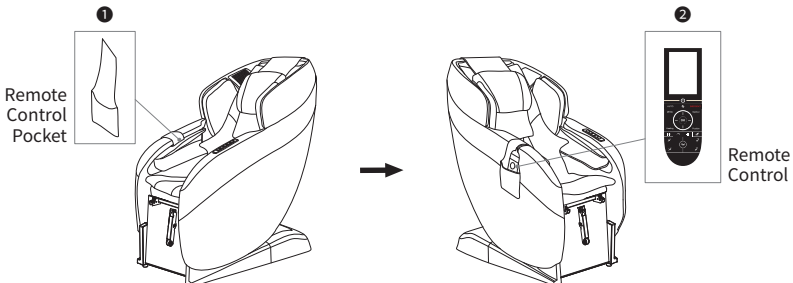

CHECK ENVIRONMENT

Make sure there is sufficient space for inclination.

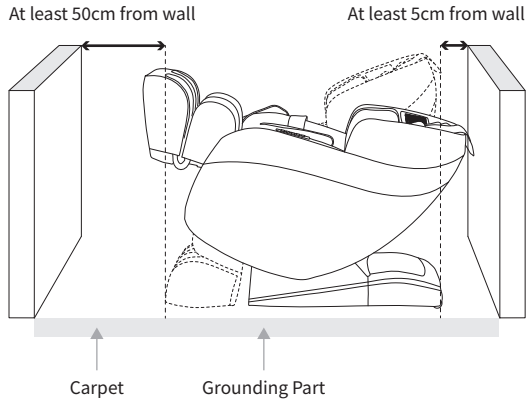

Due to the heavy weight of massage chair, please put a mat, rug, carpet or soft paddings to protect your floor.

CAUTION

- Do not place the massage chair in wet places such as swimming pool and bathroom to avoid leakage or electric shock.
- Do not place the massage chair under the sun to avoid upholstery deterioration, colour fading, and discoloration.
- Do not place the massage chair near to the stove or other heating places to avoid upholstery deterioration.
- Please place the massage chair in a flat surface to avoid massage chair from falling or other unexpected incidents.


STEP 3

Fix the leg rest.

- ❶ Place the rear of leg rest near in front of massage chair.
- ❷ Pair the leg and foot harness plug with the socket on the main body and air tube plug on the main body.
- ❸ Raise the leg rest with both hands, push the shaft of leg rest toward the level pin of the hangers and lock it to the main body.
- ❹ Paste the Velcro of the leg rest with the seat cushion.



Note: The shaft must be securely attached, otherwise it will fall off. When inserting the air tube plug and wiring harness, do not wrap the air pipe and wiring harness together.

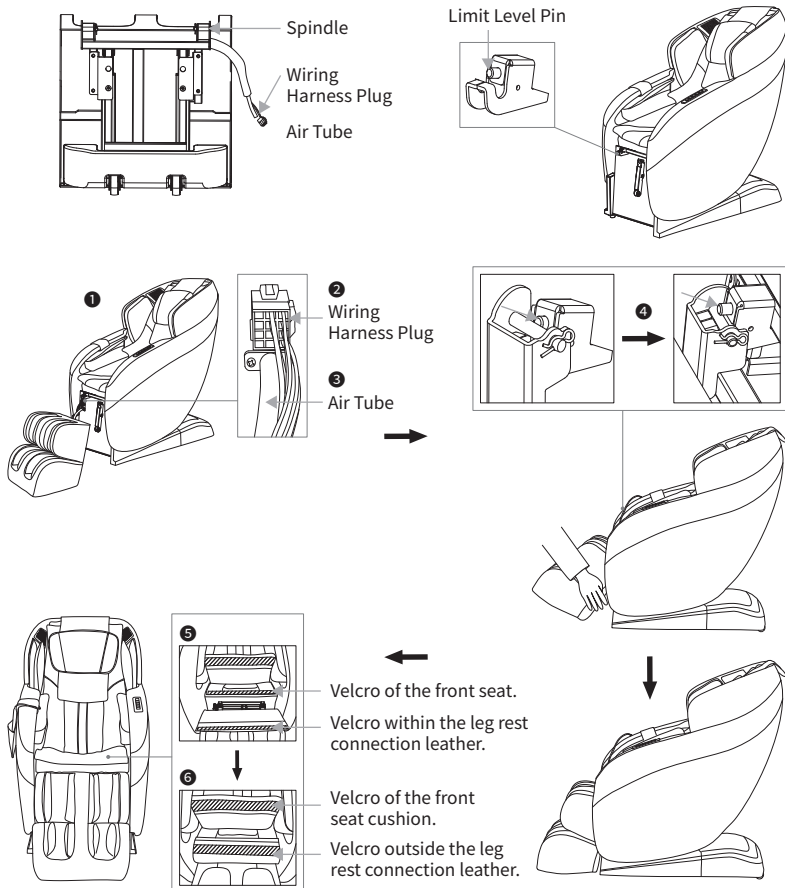


STEP 4

After assembling.

- 1 Insert the cable line into the socket.
- 2 Turn on the switch behind the power box (switch “ON/OFF”, “O/I”, press “I” to turn it on).
- 3 Use the remote control to choose the massage programs that you want.



Make sure the switch is OFF before inserting the cable line into the socket.

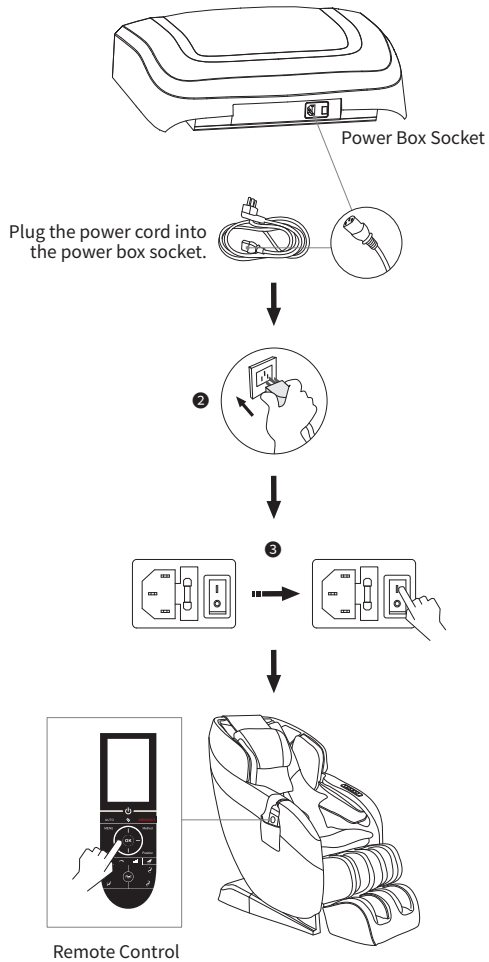

SURROUNDING ENVIRONMENT

CAUTION



Do not place the massage chair in wet places such as swimming pool and bathroom to avoid leakage or electric shock.




Do not place the massage chair under the sun, near to the stove or other heating places to avoid upholstery deteriorated.



Please place the massage chair on a flat surface to avoid massage chair from falling or other unexpected incidents.


Check Surrounding Areas

- Check the front and back areas of massage chair to ensure there are no people, pets or other objects around.

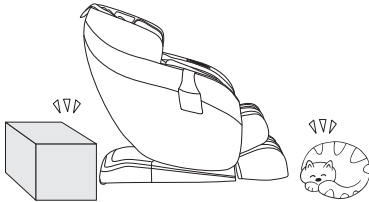


Check Power Cable and Plug

1. Use dry cloth to clean the dust on plug regularly.
2. Do not bend, pull, twist, or tie the power cord.

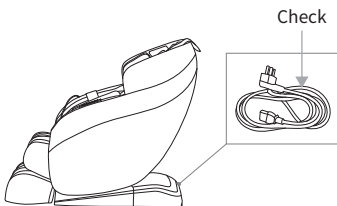


Available Space To Place The Massage Chair

Make sure the distance between the backrest and the wall has at least 5cm.

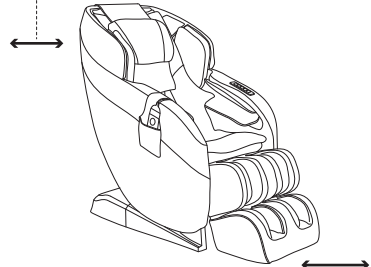



Make sure the distance between the leg rest and the wall has at least 50cm.

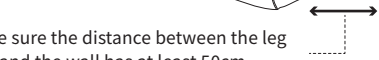


Check The Surroundings

When the backrest or leg rest reclines or extends, please take note on:

1. Check if there is any person, pets, or objects around the massage chair.
2. Check the space size.

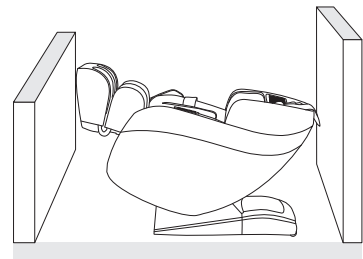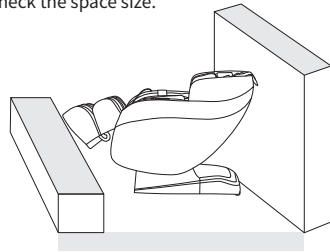

MOVING METHODS

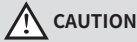


CAUTION

- ✦ Do not move the massage chair when it is working to avoid any accidents or damages.


Floor Protection

- ✗ Bind the cables and put them on the seat to avoid damage while moving the massage chair.
- ✗ Do not drop or let go of the massage chair out of a sudden while moving the massage chair.
- ✗ Do not move the massage chair on a wooden floor, rough surface or in a narrow space.
- ✗ Do not move the massage chair without the assistance of Coway Logistic Technician.
- ✗ Make sure to turn off the power switch and unplug the cable before moving the massage chair.

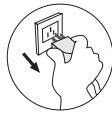

Moving The Massage Chair

Press down on the head part so that the chair falls backwards and stands on its back castors. Then, push the massage chair to desired destination steadily and set it down slowly.

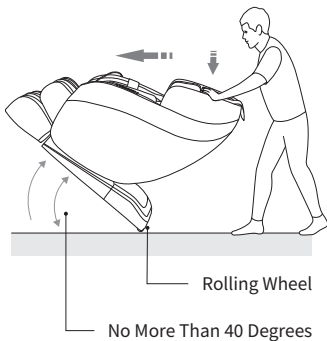


Please hold the footrest while moving the massage chair to protect the leather from scratches.

To carry this product, please do not lift the armrest.

ADJUSTMENT BEFORE MASSAGE

Before Adjustment

- ✦ Make sure the massage rollers stop at the upper part of backrest. Then, you may slowly sit on the massage chair to enjoy the massage.
- ✗ The wrong position of rollers might cause injuries.

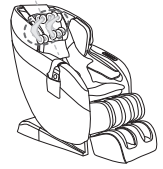

If the massage roller cannot detect the shoulder position, it will default the massage rollers to the highest position of the user's shoulder.


Right position:

Rest your back on the backrest and your head on the head cushion. The massage chair will release three "beep" sounds after the shoulder detection has finished. To make slight adjustments, you may press "UP/DOWN" button on the remote control.




- ✗ A wrong detection of the user's shoulder position may affect the massage comfort.

Recommendation

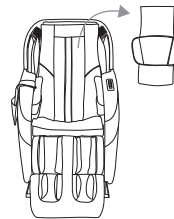





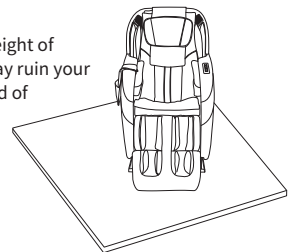


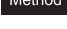
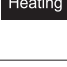










If you feel the massage intensity is not strong enough, you may remove the head cushion.

Due to the heavy weight of massage chair, it may ruin your floor in a long period of time. Please put a mat, rug, carpet or soft paddings to protect your floor.




REMOTE CONTROL



1		ON/OFF	Press this button to start or stop the massage program.
2		AUTO Massage	Press this button to select three automatic massage program options of “Recover”, “Relief”, and “Stretch”. The default operating time is 20 minutes.
3		Air Pressure	Press this button to select a full-body air pressure massage which includes upper body and lower body parts.
4		EMERGENCY	Press this button to stop all massage functions and only can select “ON/OFF” button to resume the massage chair.
5		Menu	Press this button to switch the screen of remote control to the menu interface. You can select the massage program by pressing “AUTO” selection, then the navigation buttons (UP, DOWN, LEFT, RIGHT) and the “OK” button to confirm the massage program. The other massage settings will also appear after pressing the “MENU” button.
6		Method	Press this button to select 5 different massage methods which include kneading, tapping, knocking, shiatsu and kneading & tap.
7		Heating	Press this button to turn “ON” and “OFF” for heating function on waist area. When the heat is turned on, the corresponding heating symbol will turn red. When the heat is turned off, the corresponding heating symbol will disappear.
8		Position	When the massage chair is in the manual massage mode, press this button to select the body part massage options of “Whole”, “Partial” and “Point”.
9		Navigation Buttons	Press the navigation buttons (UP, DOWN, LEFT, RIGHT) to be used as menu navigation buttons in the menu mode. You can use “UP” and “DOWN” buttons to quickly select the menu items and “LEFT” and “RIGHT” buttons to quickly enter the previous and next menus. The “UP” and “DOWN” buttons play the role of manually adjusting the position of the massage chair during the shoulder height detection and the fixed-point adjustment function in the manual massage mode.
10		OK - Confirm Button	Press this button to confirm the selection of menu items and pop up the next menu.
11		Width of Massage Rollers	Press this button to adjust the width of massage rollers which are “Narrow”, “Middle” and “Wide” during the operation of manual tapping, knocking and shiatsu.
12		Intensity of Airbags	Press this button to adjust 5 different levels of intensity of airbags massage.
13		Speed of Massage Rollers	Press this button to adjust 5 different speeds of massage rollers under the manual massage state.
14		Foot Roller	Press this button to adjust 3 different speeds of “Quick”, “Soft” and “Stop” on foot rollers in sequence.
15		Leg Rest Up	Press and hold this button, then the leg rest will rise. The leg rest will stop rising after releasing this button.
16		Leg Rest Down	Press and hold this button, then the leg rest will descend. The leg rest will stop descending after releasing this button.
17		Backrest Up & Leg Rest Down	Press and hold this button, the backrest will go up and the leg rest will go down. If release this button, the backrest and leg rest stop moving.
18		Backrest Down & Leg Rest Up	Press and hold this button, the backrest will go down and the leg rest will go up. If release this button, the backrest and leg rest stop moving.
19		Zero-Gravity	Press this button to adjust the massage chair position to zero gravity. Then, press this button to reset the massage chair to the initial working state. The zero gravity icon on the main interface will show the zero gravity status after the massage starts.



LCD DISPLAY GRAPHIC DESCRIPTIONS

ON/OFF INTERFACE

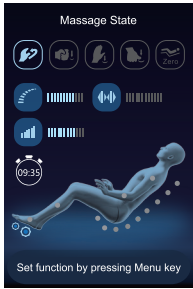


After powering on, if you press the "ON/OFF" button, the buzzer will ring with a short and crisp sound. The LCD screen will display the main menu interface and enter a standby mode. Then, the remote control will display the MENU page which has the selections of "Auto", "Manual", "Airbag", "Roller", "Heating", "Timer", "Settings", and "Stop".

Message Function

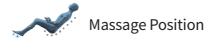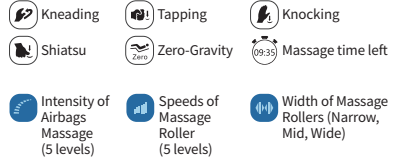

MENU INTERFACE


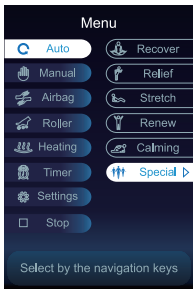


After pressing the "Menu" button, it will switch to the menu interface and all the message selections can be chosen by pressing the buttons. Pressing the "Menu" button will exit the menu interface and return to ON/OFF interface.

Refresh
Energy


Auto Massage: After pressing the "ON/OFF" button, the cursor will stop at the Automatic massage program by default. Press "OK" button to enter the menu interface, and the screen of remote control will display the following message programs: "Recover", "Relief", "Stretch", "Renew", "Calming" and "Special". Under "Special" message program, there are two automatic massage program available which are "Refresh" and "Energy".

MANUAL MESSAGE

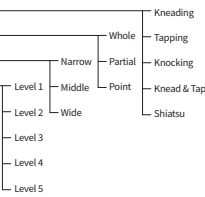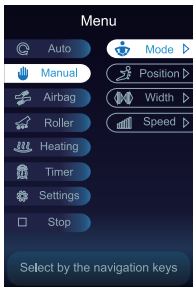

On the "Menu" interface, select manual message through the navigation button. Press "OK" button and four functional options will be presented which include "Mode", "Position", "Width" and "Speed". If you select "Mode" option, press "OK" to enter the next option, and select the desired massage technique - kneading, tapping, knocking, kneading & tapping and shiatsu. If you select "Position" option, press "OK" to enter the next option, and select the desired body part - whole, partial and point. If you select "Width" option, press "OK" to enter the next option, and select the desired width for massage rollers - narrow, middle, and wide. If you select "Speed" option, press "OK" to enter the next option, and select the desired speed for massage rollers - Level 1, Level 2, Level 3, Level 4, and Level 5.


AIRBAG

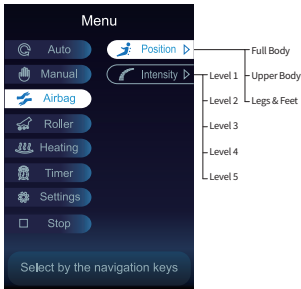

On the “Menu” interface, use the navigation buttons to select “Airbag” option.

Then on “Position” option, press “OK” to enter the next option, and select the desired body position - full body, upper body and lower body. If you select “Intensity” option, press “OK” to enter the next option, and select the desired airbags massage intensity - Level 1, Level 2, Level 3, Level 4, and Level 5.


TIMER

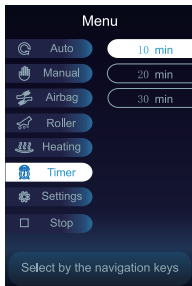

On the “Menu” interface, use the navigation keys to select message timing.


Press “OK” to enter the next option, and select the desired message duration - 10 minutes, 20 minutes and 30 minutes. The default message duration is 20 minutes. So, the massage chair will turn off automatically when the time is up.

FOOT ROLLER

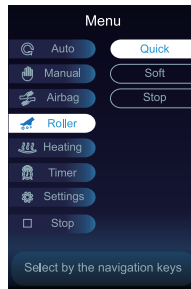


On the “Menu” interface, use the navigation buttons to select the speed of message roller. Press “OK” to enter the next option, and select the desired foot roller speed - quick, soft and stop.

HEATING

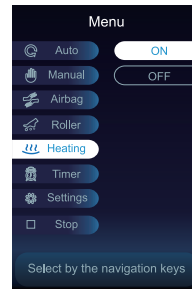

On the “Menu” interface, use the navigation buttons to select heat function for waist area. Press “OK” to enter the next option, and select the desired heat function - ON and OFF.

SETTINGS

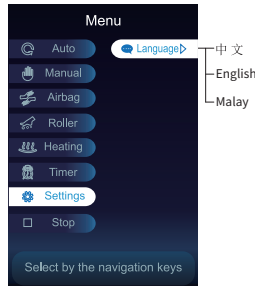


On the “Menu” interface, use the navigation buttons to select message settings. Press “OK” to enter the next option, and select the desired language - 中文, English and Malay.

STOP






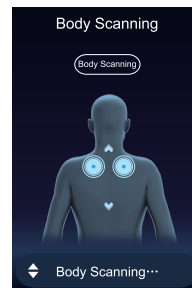


On the “Menu” interface, use the navigation buttons to select “Stop” option. Press “OK” to stop the message program. Press “Menu” button to go back to “Menu” interface.

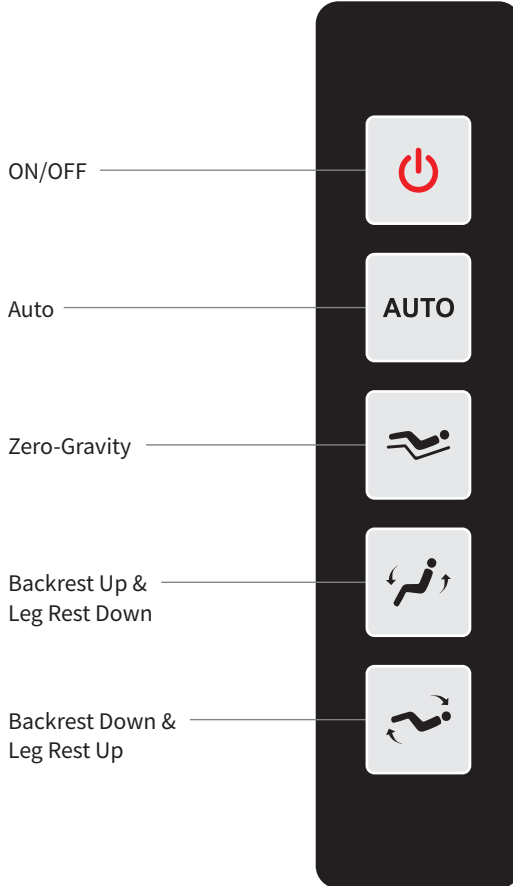

After selecting the desired message program, the massage chair will start body scanning and the words “body scanning...” will display on the screen of remote control. After the body scanning is finished, the buzzer will tick (once every second). At this point, the message rollers will locate at the shoulder position, you can press Up and Down to adjust. When the message rollers are adjusted, “shoulder height adjusting...” will display on the screen. The default message duration is 20 minutes. The message chair will turn off and reset to its upright position once the message is finished.

ELDERLY-FRIENDLY BUTTONS




<p>1</p>		<p>Press "ON/OFF" button to turn on or turn off the massage chair.</p>
<p>2</p>		<p>After switching on the massage chair, press the "Auto" button to select three auto massage programs with different LED colour indicators:</p> <p>■ Recover ■ Relief ■ Stretch</p>
<p>3</p>		<p>After switching on the massage chair, press this button to enter zero gravity position. Press this button again to reset the massage chair to its upright position.</p>
<p>4</p>		<p>Keep pressing this button for backrest to go up and leg rest to go down. Release this button, the backrest and leg rest will stop moving, and the massage chair will be fixed in that position.</p>
<p>5</p>		<p>Keep pressing this button for backrest to go down and leg rest to go up. Release this button, the backrest and leg rest will stop moving, and the massage chair will be fixed in that position.</p>

ON/OFF

STEP 1

Power On.

- ❶ Plug in the power cable into the power socket which indicated as "a" in the diagram.
- ❷ Plug in the power plug into the power supply socket.
- ❸ Press the "ON/OFF" button at the power cord socket to turn on the massage chair.
- ❹ Press "ON/OFF" button on the remote control. It will beep once and enters the main menu interface.

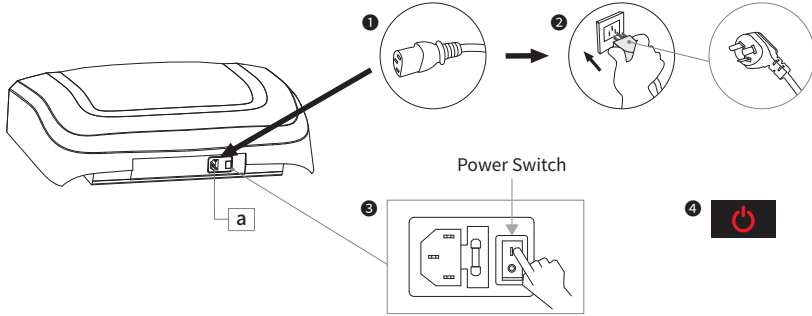

STEP 2

Massage.


- ❶ The massage chair will operate based on the massage selections. Regarding the massage methods, please refer to page 16 and 17 for more details.
- ❷ After the massage operation ends, the massage chair will return to the default position and the display screen will turn off.



STEP 3

Power Off.

- ❶ Press "ON/OFF" button to turn off the massage chair and it will restore to its upright position automatically.
- ❷ After the massage rollers return to its default position, turn off the power switch at the power case.
- ❸ Unplug the power plug from the socket.

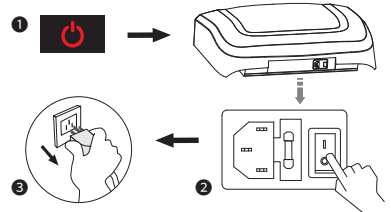


 WARNING	<ol style="list-style-type: none"> 1. Before using, pull up the head cushion, back cushion, etc. to check if the PU material is damaged. If is damaged, please stop using the massage chair and contact Careline or Coway Logistic Technicians to repair or replace. 2. Only plug to proper socket. 	 ATTENTION	<ol style="list-style-type: none"> 1. Before sitting down, please make sure there is no objects in between armrest, leg rest, backrest and seat of massage chair. 2. Make sure the massage chair is in upright position before using. 3. Do not stand on massage chair while in use.
--------------------	---	----------------------	---

FUNCTION ILLUSTRATION

Leg Rest Up

Press this button, the leg rest to go up. Release this button, the leg rest will stop moving and it will be fixed in that position.

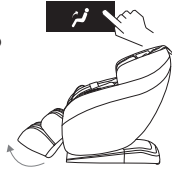


Leg Rest Down

Press this button, the leg rest to go down. Release this button, the leg rest will stop moving and it will be fixed in that position.




Backrest Down and Leg Rest Up

Press this button, the backrest to go down and leg rest to go up. Release this button, the backrest and leg rest will stop moving and it will be fixed in that position.

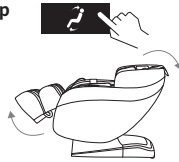

Backrest Up and Leg Rest Down

Press this button, the backrest will go up and leg rest to go down. Release this button, the backrest and leg rest will stop moving and it will be fixed in that position.

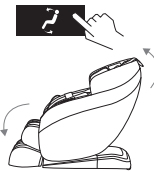


Zero-Gravity

Press this button the backrest to go down and leg rest to go up until the massage chair automatically reaches zero gravity state. Press this button again, the backrest and leg rest will stop moving and it will be fixed in that position.




Leg Rest Extend and Retract

Leg rest can extend or retract within a range of 22cm.

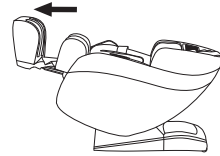


Arm Massage

The armrest has built-in airbag pressure massage function. Put your arms in the armrest airbag when it is not inflating. Once the airbag is inflated, the arms and palms will be massaged.

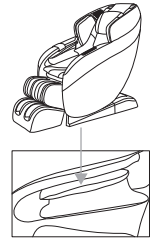


Shoulder Massage

Multilayer extrusion airbags are deployed on both sides of the shoulder to relieve fatigue.

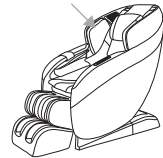

Foot Massage

There are 2 rollers and 8 airbags to massage the soles and ankles.

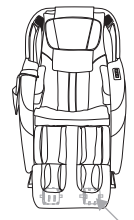


WARNING



1. Please ensure there are no people, pets or any objects around the massage chair to avoid unexpected injuries or damage.
2. When adjusting the backrest, be careful of the gap between the backrest and armrest.
3. When the leg rest is moving, please do not stand on or leave the seat.
4. When the leg rest is moving, please do not stop the leg rest from moving to avoid damaging the massage chair.
5. Please refer to page 15 and 16 regarding remote control instructions for more details.

RESTORATION OF MESSAGE CHAIR


- 1 Make sure there is no people or pets or any objects within the range of backrest and leg rest.

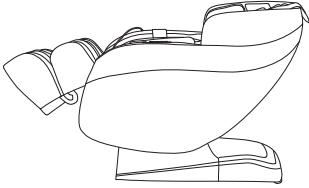


- 2 Restore the massage chair to its original position by pressing the “Backrest Up & Leg Rest Down” or “ON/OFF” button on the remote control.

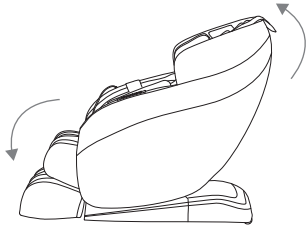


- 3 Put the remote control back into the remote control pocket after the massage chair is restored to its original position.

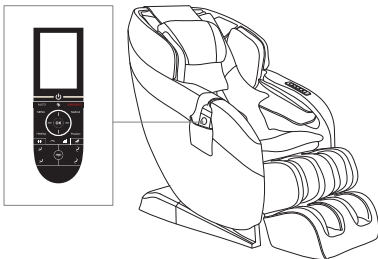

- 4 Switch off the power.

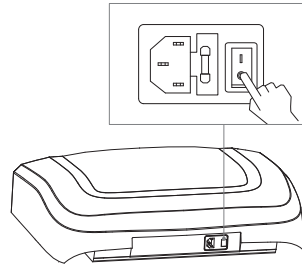

- 5 Unplug the electricity from the socket. (Attention: hold the right plug position)

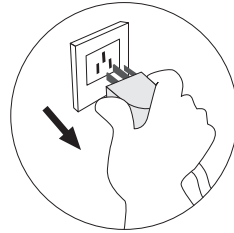

- 6 Clean the massage chair if necessary.

⚠ ATTENTION!

- After using, press “ON/OFF” button to end all the massage programs and wait for restoration. Please ensure to turn off the electricity to avoid any unexpected injuries to children or pets.
- After using, turn off the power and unplug the electricity to avoid moisture, dirt and aging of insulation in case of causing damage.


SYNTHETIC LEATHER

General Cleaning

Clean the massage chair with a soft and dry cloth.




Do not use the thinner, gasoline, alcohol or other chemical materials.

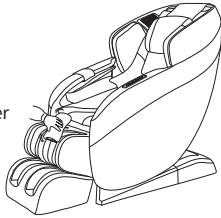

PLASTIC PART



- 1 Dip the soft cloth, squeeze it and clean the plastic part.
- 2 Allow it to dry.

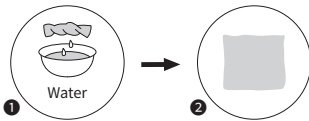

If Leather is Dirty

- 1 Dip the soft cloth, squeeze it and clean the stain on the surface gently.
- 2 Wash the soft cloth, squeeze it and wipe the leather surface again.
- 3 Clean it with a soft dry cloth.
- 4 Allow it to dry (hair dryer is prohibited).

REMOTE CONTROL CLEANING




Remote Control



- 1 Wipe the remote control with a soft cloth after dipping it into the water and squeezing it.
- 2 Allow it to dry.

Do not use the thinner, gasoline, alcohol or other chemical materials.

CLOTH MATERIAL

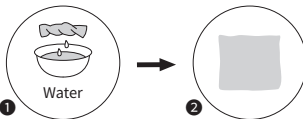

- 1 Dip the soft cloth into the clean water, squeeze it and clean the cover surface.
Do not use thinner, gasoline, alcohol or other chemical materials.
- 2 Allow it to dry.

ABOUT MASSAGE CHAIR CLEANING



- Before cleaning, unplug the electricity and do not touch the plug with wet hands.
- Make sure the hands are dry when plugging into the socket.
- If failed to follow the above instruction, user may get an electric shock or injured.

FAQ AND TROUBLESHOOTING

Problems/Issues	Possible reasons	Troubleshooting
The massage chair is not working after switching on the power.	Power switch at the bottom is not turned ON.	Turn on the power switch (refer to page 21).
	You may have not chosen a massage mode yet.	Choose any massage programs to start the massage.
	The power plug is not properly connected to the socket.	Make sure the plug and socket are connected.
	Wire or plug has been damaged.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
	The fuse of massage chair has burned out.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
	The inner circuit has a problem.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
There is a beep sound inside the massage chair while in use.	You are probably hearing the sounds of air pump, motors or mechanical parts.	This is normal.
Different positions of the left rollers and right rollers.	The massage rollers do not always run symmetrically.	This is normal. You may stop the massage and restart to get the massage rollers to run symmetrically.
The sound suddenly becomes much louder while in use.	You may have used the massage chair continuously for a long period of time.	Turn off the power to allow the massage chair to rest for an hour before switching it on again.
	The internal parts may have worn down after using the massage chair consistently over a long period of time.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
The massage program suddenly stops while in use.	Poor power connection.	Connect the electricity power again.
	The auto program timer is finished.	Turn off the power to allow the massage chair to rest for an hour before switching it on again.
Neither the backrest nor the leg rest can lay down.	Check if there are any objects around the massage chair; or if the massage chair is overloaded. Sometimes, the massage chair may automatically stop working for safety purposes.	Remove the objects and turn off the power to allow the massage chair to rest for an hour before switching it on again.
The massage chair can't return to its original position.	Excessive operation; timer setting is finished.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
Electric wire or plug overheats.	It may work overload.	Turn off the power to allow the massage chair to rest for an hour before switching it on again.
	Other abnormal cases.	Stop using the massage chair and contact Careline or Coway Logistic Technician for checking and/or replacement.



Note: If your problems are not stated as above, please turn off the power supply and contact Careline or Coway Logistic Technician for assistance.

TECHNICAL DATA

Name	Coway Massage Chair
Model	MC-ST01B
Input Voltage	220-240V~ 50/60Hz
Safety Design	Class 1
Power	180W
Net Weight / Gross Weight	84kg / 100.5kg
Packing Size	1160 × 770 × 1265mm (L × W × H)

