




**COWAY LOVES THE PLANET**  
This paper can be recycled.

# COWAY

## Water Filtration Device CHP-06DL

- This product can not be used if the voltage is different from that mentioned in the rating plate.
- For your safety and proper use of the product, please read this User's Manual before use.
- Warranty card is included in this User's Manual.

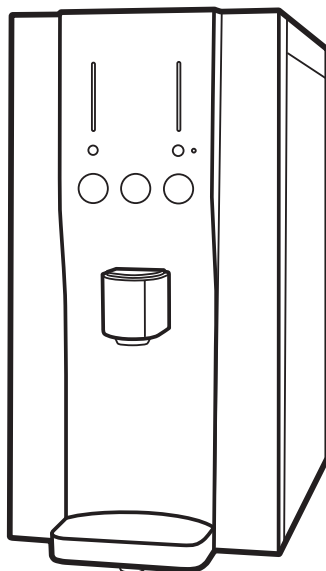


# FEATURES

1

## Quantitive extraction function

It is convenient as we can drink a glass of water by performing the quantitive extraction.

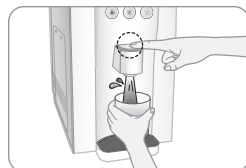

2

## Hot water locking device, hot water warning effects devicen


It applied the hot water locking devices to prevent the danger of burn when child extracts the hot water by the curiosity, and the hot water doesn't be extracted and it gives the warning sound even if you press the hot water extraction button in the locking status.



3

## Cold water/hot water/room(ambient) water extracting with one faucet

It added the customer's convenience for the cold water/the hot water/the room(ambient) water using one faucet.

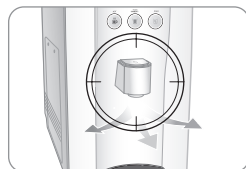

4

## Power saving function using the light sensor


When you set the sleep mode, as it decreases the driving times of the motor and the heater at night automatically, the amount of the power consumption is decreased.



5

## Indication part that can see the product status at a glance

It is convenient as it can see the product status at a glance using various indicator.

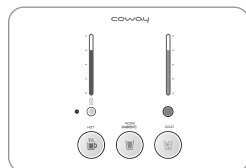

# DEAR CUSTOMERS

Thank you for using **Coway Water Filtration Device.**

Please read this Users' Manual to use and maintain the product correctly. If you encounter a problem while using the product, you may solve the problem referring to the User's Manual. As this manual contains the product warranty card, please keep it in a safe place.



The CHP-06DL is tested and certified by WQA according to NSF/ANSI 42, 53, 58, 401 and 372.

## CONTENTS

### FOR INFORMATION

- | 03 | SAFETY INFORMATION
  - Danger
  - Warning
  - Caution
- | 07 | PARTS NAME
- | 08 | WATER FILTRATION PROCESS

### MAINTENANCE

- | 16 | INSTALLATION
- | 18 | CLEANING METHOD
  - Storage tank
  - Gutter
- | 21 | FILTER REPLACEMENT
- | 22 | FILTER REPLACEMENT METHOD

### HOW TO USE

- | 09 | INSTALLATION PRECAUTIONS
- | 11 | INDICATION / OPERATION PART
- | 14 | HOW TO USE
  - To drink the cold water
  - To drink the hot water
  - To drink the room(ambient) water
  - To extract continuously

### OTHERS


- | 23 | TROUBLESHOOTING
- | 25 | SPECIFICATION
- | 26 | WATER FLOW DIAGRAM
- | 29 | WARRANTY CARD

# SAFETY INFORMATION


---

## **Be careful to keep this safety information.**

Please read this information to prevent property loss and ensure your safety.



for 220 V - 240 V~ use only



for 120 V~ use only

## **▲ Danger : If not observed, serious injury or even death could occur.**

- Do not use a damaged power cord or plug, and loose outlet.
- Do not pull the power cord.
- Do not carry the unit by its power cord.
- Do not touch the power plug with a wet hand.
- Do not forcefully bend the power cord or put it under a heavy object to prevent it from being damaged or deformed.
- Do not connect and pull out the power plug repeatedly.
- Remove any dust or water off in the pin and contacts of the power plug.
- Do not plug into an outlet that is being used by several other appliances.  
Use an electrical outlet dedicated.
- When you don't use for a long time, close the main water supply valve and unplug.
- Do not attempt to repair or modify the power cord at your discretion.
- In the case the power cord is damaged, do not replace the cord yourself. Call Coway Service Center to have it replaced.
- Do not install near a heating device.
- When the water is coming inside of the product or there is a puddle on the product, call Service Center after closing the supplying valve and unplugging.

- 
- If our product produces a strange noise or odd smell, immediately unplug from the electrical outlet and call our Service Center.
  - Do not put the candle, a light for cigarette on the products.
  - Do not place any containers with water, medicine, food, small metallic objects, or any flammable material on the top of the product.
  - Clean after unplugging.

## SAFETY INFORMATION

---

### **▲ Warning : If not observed, serious injury or property damage could occur.**

- If the electric outlet is wet, carefully unplug the unit and let the electric outlet completely dry before subsequent use.
- Unplug the product before repair, inspection, or parts replacement.
- Do not install the product on a sloped floor.
- Do not press the product by constraint or impact.
- Do not clean by spraying the water directly or don't wipe the product using the benzene and thinner.
- Do not repair, disassemble, or modify.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


//////

**⚠ Caution : If not observed, minor physical injury or property damage may occur as a result.**


- The filtration device installation shall comply with applicable state and local regulations.
- Use after closing the water tank cover completely inside of the product.
- To drink the filtered, change the filter according to the filter replacement cycle.
- When you don't use for a long time, use after draining the saved water completely and emptying the newly room water once again.
- Do not use filtered water for the water exchange of an aquarium or a fishbowl.
- After moving the product or replacing the Plus Inno-sense filter, the black powder can be remained in the inner bottom of the water tank.
- Rotate with grasping the room water extraction faucet or don't raise the product using the faucet.
- Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.
- Cleaning and user maintenance shall not be made by children without supervision.

# PARTS NAME

## Front

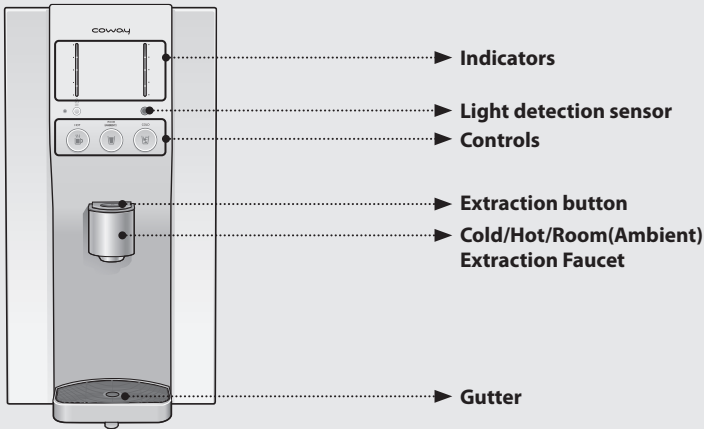

## Rear

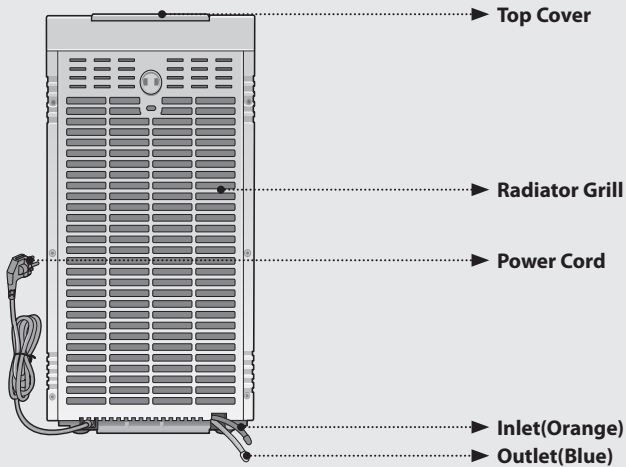



# WATER FILTRATION PROCESS

The filter is the core technology of the filtration system.

If you don't use qualifying filter or if you use an old filter that has expired, the system performance may degrade.

## The 5-step (or 4-step) water filtering system(CHP-06DL)

### Step 1,2 : NEO-SENSE FILTER


### Step 3 : RO MEMBRANE FILTER

### Step 4 : PLUS INNO-SENSE FILTER

### Step 5 : ANTIBACTERIAL FILTER\*

The CHP-06 DL conforms to NSF/ANSI 42, 53, 58, and 401 for the reduction of Aesthetic Chlorine, Taste and Odor, VOCs, Pentavalent Arsenic, Barium, Radium 226/228, Cadmium, Hexavalent Chromium, Triavalent Chromium, Lead, Copper, Selenium, TDS, Meprobamate, Phenytoin, Atenolol, Carbamazepine, TCEP, TCP, DEET, Metolachlor, Trimethoprim, Ibuprofen, Naproxen, Estrone, Bisphenol A, Linuron, and Nonyl Phenol as verified and substantiated by test data and NSF/ANSI 372 for lead free compliance. See performance data sheet for individual contaminants and reduction performance.

See performance data sheet for individual contaminants and reduction performance.

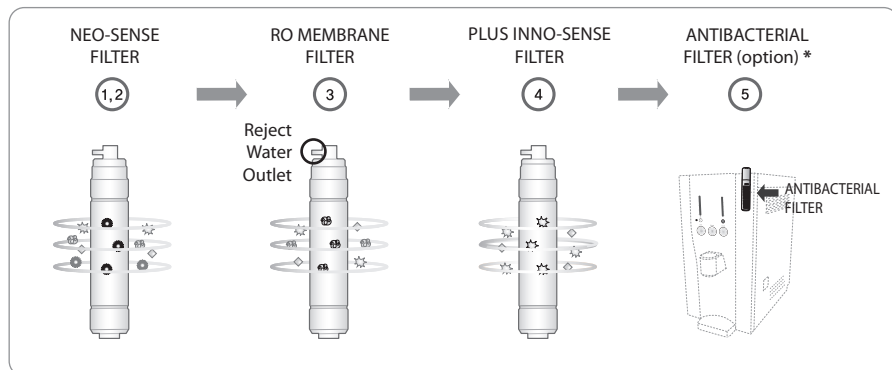

\* The Antibacterial filter contains silver, which is known to inhibit the propagation of microorganisms and to maintain the integrity of the filter.



Tips

#### Uses of reject water


- The reject water should be used for cleaning the restroom, the house, clothes, or purposes other than drinking.
- Never use the reject water for a drinking or cooking.

# INSTALLATION PRECAUTIONS


---


## The summary for the proper installation of the water filtration device

1. Close main water supply valve to separate the faucet.

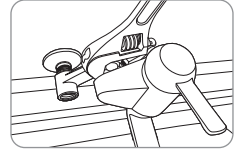


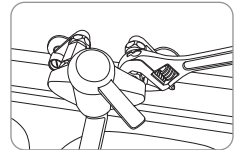
2. Apply the teflon tape on the adaptor and fit it to the pipe.

 Do not turn the water pipe.

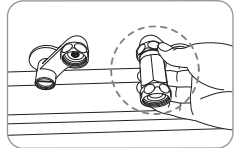


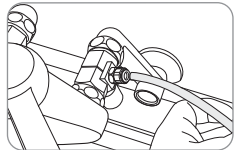
3. Connect the faucet with the adaptor.

 Shall install the adaptor with connector on the cold water pipe.




4. Connect 1/4 inch orange tubing with the connector on the adaptor.

 Flush water through each filter at least 5 minutes before Connection.



5. Open the feed valve to supply water to the filtration system.

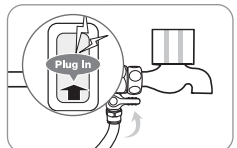

## Please check before use!

- ⚠ Only connect the power cord to the voltage rating that matches it on the rating plate.



- **Open the main water supply valve.**

The main water must be supplied to operate the water filtration device normally.

- **After installing the product**

Get rid of the saved water above the full water in the inner water tank 2 times or more to use.

- **When the indicator in the indication part is turned off**

When the indicator in the indication part is turned off, check if the power supply was stopped due to the power failure or other cause.

- **Regular filter replacement**

It is important to replace the filter regularly to maintain water quality as it is designed. If the filter is overused beyond its service life, the performance of the water filtration device deteriorate. Do not miss the filter replacement cycle.

- **When you didn't use for a long time**

If you saved the water for a long time or you didn't use, drain the water inside of the water filtration device completely and remove the newly filtered water one time to use.

- **When you don't want to use the product for a long time.**

Close the main water supply valve and unplug the power cord.




Tips

When you don't use for a long time, close the main water supply valve and unplug the power cord.

# INDICATION / OPERATION PART

## Indication part / Operation part

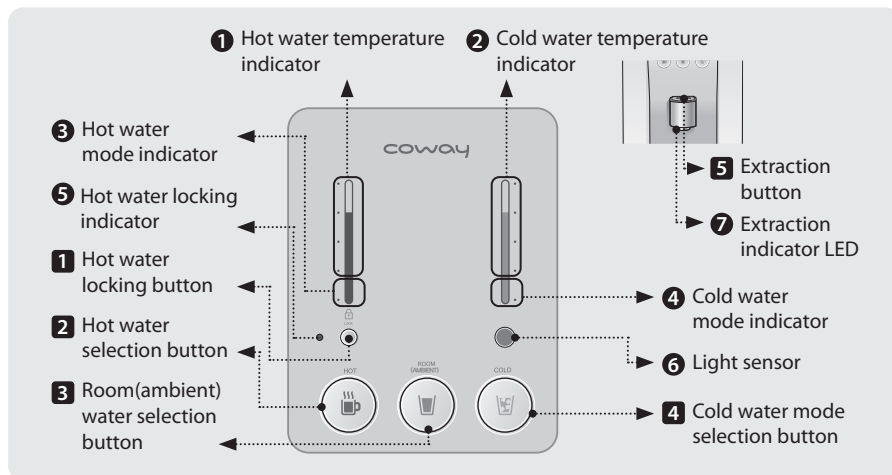

### 1 Hot water temperature indicator

The indicator is turned on according to the hot water temperature. The more LEDs are on, the higher the hot water temperature is.



### 2 Cold water temperature indicator

The indicator is turned on according to the cold water temperature. The more LEDs are on, the lower the cold water temperature is. When all the LEDs are on, then the cold water temperature is around 4.5 °C.



### 3 Hot water mode indicator

When you select hot water mode, the indicator is turned on.



### 4 Cold water mode indicator

When you select cold water mode, the indicator is turned on.



### 5 Hot water locking indicator

When you select hot water locking, the indicator is turned on.



### 6 Light sensor

This sensor detects the ambient light around the product.



### 7 Extraction indicator LED

An extraction indicator LED turns on when the storage tank is full.

## Operation part



### 1 Hot water locking button

To select/deselect hot water locking mode.

When you lock the hot water, the hot water doesn't be extracted even if you press the extraction button.



### 2 Hot water selection button

To select/deselect hot water mode. (Pressing so long)

Use when you wish to extract the hot water. (Pressing shortly)



### 3 Room (ambient) water selection button

To select/deselect room water mode. (Pressing so long)

Use when you wish to extract the room water. (Pressing shortly)



### 4 Cold water mode selection button

To select/deselect cold water mode. (Pressing so long)

Use when you wish to extract the cold water. (Pressing shortly)




### 5 Extraction button

Use when you extract the water.

## To use cold water

Press cold water mode selection button for about 3 seconds or more, then cold water mode indicator will be turned on. When you want to turn off cold water mode, press the selection button for about 3 seconds or more.


\* When you are using the product for the first time, or if the cold water feature is off for a long time, then it takes about an hour for the water to reach a preset cold water temperature.

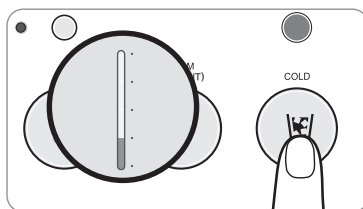

## To use hot water

Press hot water mode selection button for about 3 seconds or more, then hot water mode indicator will be turned on. When you want to turn off hot water mode, press the selection button for about 3 seconds or more.


\* When you are using the product for the first time, or if the hot water feature is off for a long time, then it takes about 30 minutes for the water to reach a preset hot water temperature.

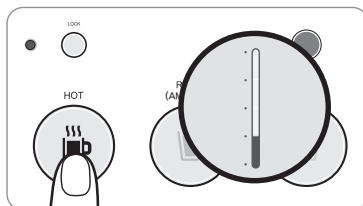

# INDICATION / OPERATION PART

## To use the hot water locking mode



Press the hot water locking button for about 3 seconds and check if the hot water locking indicator in the indicator part is turned on. If you wish to turn off the hot water locking mode, press hot water locking button for about 3 seconds or more.

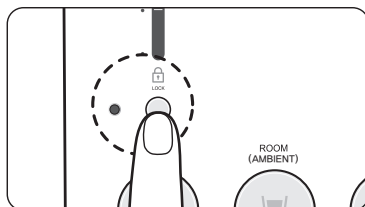

## Selecting the power-saving function




If you press and hold the hot water and cold water mode selection buttons down simultaneously for approximately 3 seconds, the hot water LED blinks, a "Ding~" sound is played and setup mode is activated. At this time, if you press the cold water mode selection button once, the cold water temperature LED is turned on and the power-saving function is activated. (The cold water temperature LED is turned off when the power-saving function is disabled.)

When the mode selection is complete, and you press and hold the room temperature water mode selection button for approximately 3 seconds, the selection is saved and the state changes to the standby state.

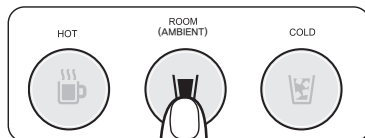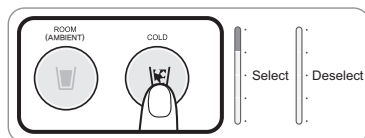

## Using the set quantity extraction function



If you press and hold the hot water and cold water mode selection buttons down simultaneously for approximately 3 seconds, the hot water LED blinks, a "Ding~" sound is played and the setup mode is activated. At this time, whenever you press the hot water mode selection button, the amount of water to be extracted cycles through 120 mL → 200 mL → 300 mL → 120 mL in this sequence and the corresponding hot water temperature LEDs are turned on. When the setting is complete, and you press and hold the room temperature water mode selection button for approximately 3 seconds, the selection is saved and the state changes to the standby state.

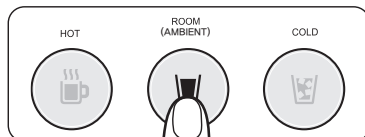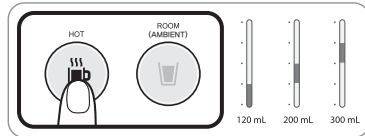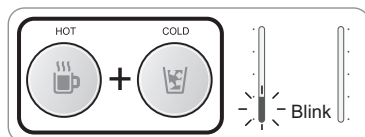

# HOW TO USE

## To drink the cold water

If you check the cold water temperature indicator and press the extraction button by selecting the cold water button, about 1 cup of the cold water (paper cup basis) is extracted. When you press the extraction button again during the extraction, the extraction is stopped.

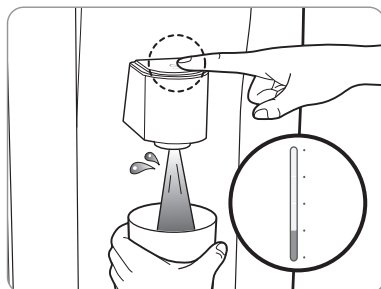
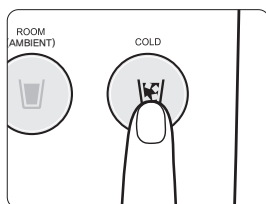


Tips

If the cold water doesn't come from the water filtration device, check if the cold water mode indicator is turned on (See P.12).

## To drink the hot water

Check the hot water temperature LED, select the hot water button and press the extract button. An amount of hot water of one paper cup is extracted. If you press the extract button again while hot water is being extracted, the extraction is stopped.

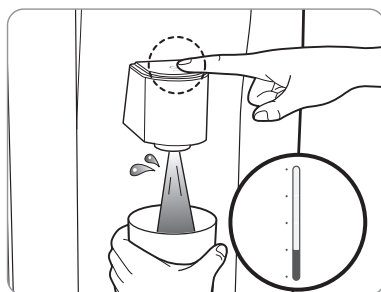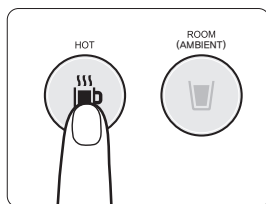

Tips

If the hot water doesn't come from the water filtration device, check if the hot water mode indicator is turned on (See P.12).



- ⚠ To protect the burning by the hot water, if you don't press the extraction button within a certain time (about 5 seconds) after pressing the hot water selection button, it is switched to the cold water extraction status automatically.
- ⚠ To protect the burning by the hot water, it is switched to the cold water extraction status automatically when a certain time (about 5 seconds) is passed after extracting the hot water.

When the warning sound only is ringing without extracting the hot water, check the hot water locking indicator (See P.12).

# HOW TO USE

## To drink the room(ambient) water


When you select the room(ambient) water button and press the extraction button, about 1 cup of the room(ambient) water (paper cup basis) is extracted. When you press the extraction button again during the extraction, the extraction is stopped.

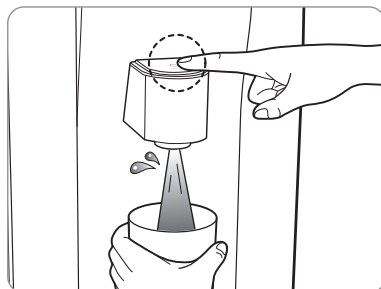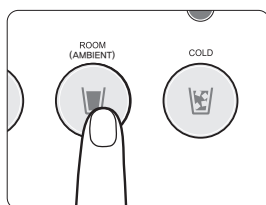

## To extract continuously

If you select a type of water (cold water/hot water/room temperature water) and press and hold the extract button at the top of the faucet for approximately 3 seconds, the extraction LED is blinked and you can extract the selected water for 60 seconds continuously.


If you press the extract button again during the extraction, the extraction is stopped.

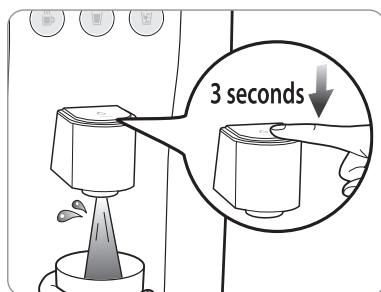




# INSTALLATION

Follow the instruction for installation

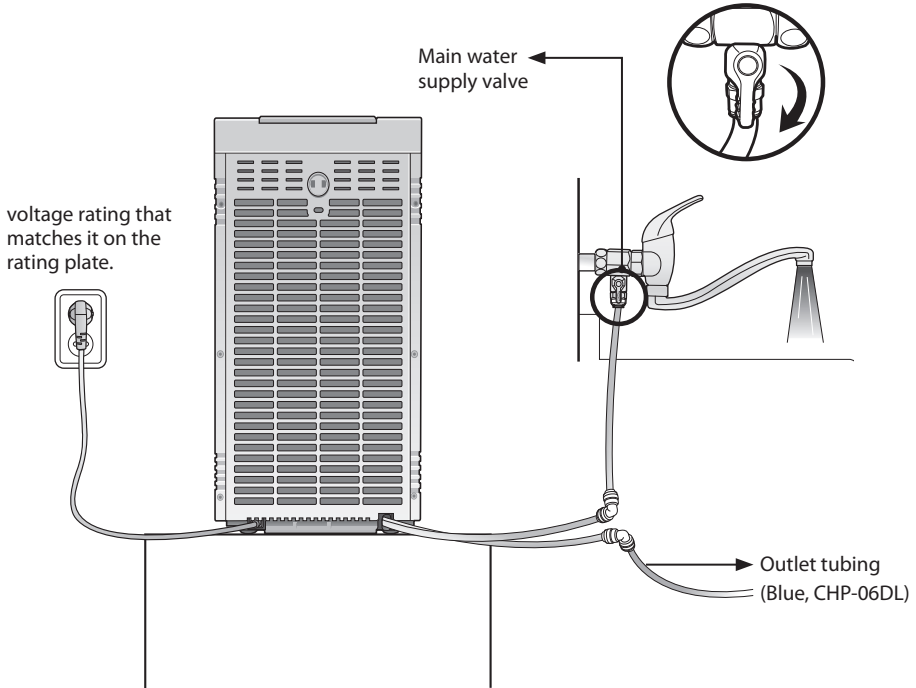

Connect the orange color inlet tubing ❶ to the tap water supplying pipe. Connect the outlet tubing(CHP-06DL) ❷.

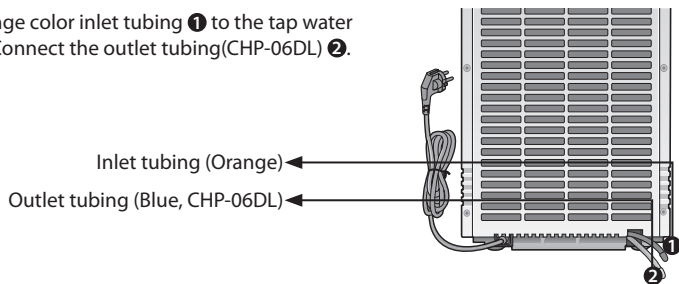

# INSTALLATION

## Be cautious!


### ■ Water filtration device installation place 1

Please install the water filtration system not at a rough place, a damp place, a place where the unit is exposed to the direct sunlight, a place where dust is present, or a place that the water drops.



### ■ Water filtration device installation place 2

Please install at the place where it is 10 cm or more off from the wall and the bottom is flat and firm.

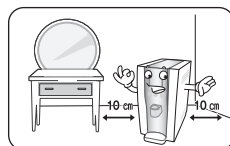


### ■ After installing the water filtration system

Please empty the water tank filled with filtered water two times after the product installation.




### ■ Cold water plumbing

Please connect the source water. Make sure that the source water is not from hot water line. If you use hot water as source water, then it will cause permanent damages to RO membrane and severely degrade the product performance.

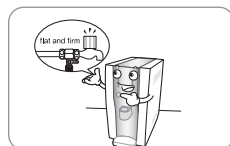

### ■ Movement and installation

When the position is moved, connect the power cord when 30 minutes passes after installing.

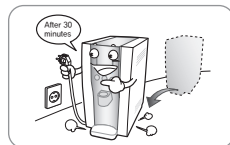

Tips


To maintain optimal product performance, consult a Coway engineer for the detailed installation methods.

- ⚠ There may be some water remaining inside of the filter which was used to test the product during inspection process at the factory. Please feel at easy and use as it isn't the used product.
- ⚠ Don't reuse the main water supply valve and hose that was previously used when you re-install the product.

# CLEANING METHOD


## Storage tank

1. Turn off by pressing cold water/hot water mode selection button in the front of the product for 3 seconds or more and unplug the power cord. Close the main water supply valve.

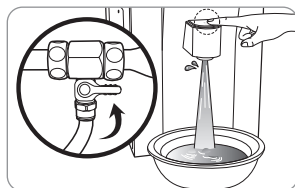


2. Open the side draining door and pull out the red draining faucet. Empty the water tank completely using the draining hose and unplug the power cord.

\* Since hot water is drained immediately once the draining hose is connected, take care not to burn yourself.

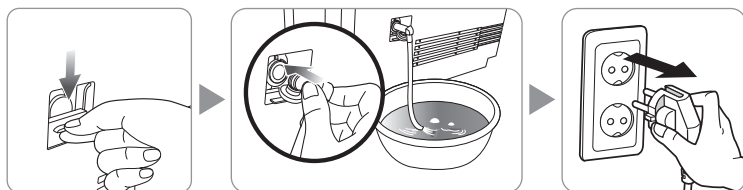

3. Please remove the top cover, and then un-hook the fixed clip holding the top cover of the water tank. Now remove hose and open the tank cover.

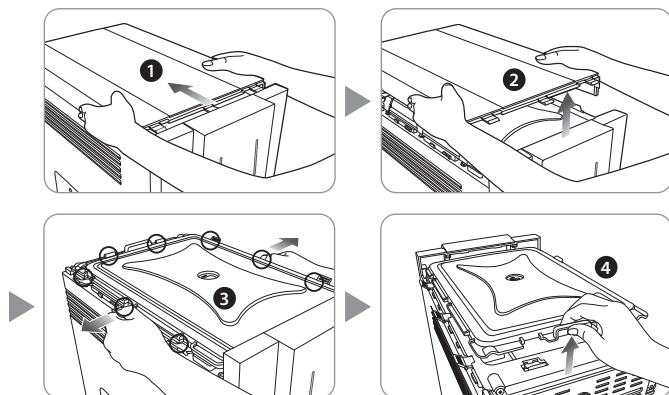


## CLEANING METHOD

---


4. Please mount the antibacterial filter \* again after separating it from the water tank cover and cleaning it by shaking in the drained water. (Antibacterial filter – option \*)



5. Please wipe the surface of the storage tank with soft clothes.

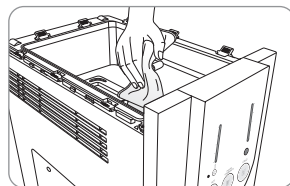


6. Use the storage tank after cleaning it with the drained water, plug-in the power cord, then empty the water tank using the draining hose and continuous extraction method. After cleaning, please close both tank and top cover, then empty the water tank filled with filtered water one more time.

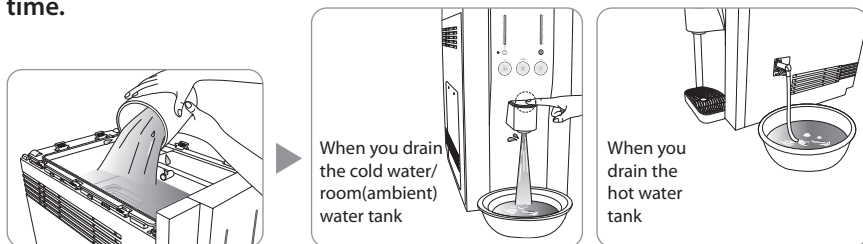

\* The Antibacterial filter contains silver, which is known to inhibit the propagation of microorganisms and to maintain the integrity of the filter.

7. Open the main water supply valve after closing the upper cover. Please operate the water filtration device again by pressing cold water/hot water mode selection button in the front of the product after checking if the water is coming from the extraction faucet.

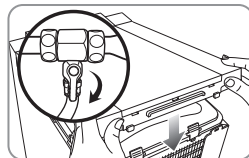

Tips

⚠ **Close the storage tank cover completely.**  
Insects or other foreign particles can be entered.

⚠ **When you clean the storage tank, don't use any chemicals or detergent.**

If you don't clean chemicals or detergent cleanly, it can be harmful to the body.

- Keep the surroundings clean and clean the storage tank once per two months.


Drugs,  
detergent, etc. X



## Gutter


### 1. Gutter separation method

The gutter can be separated easily if you separate the gutter cover and lift up.

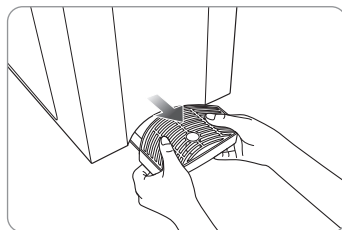

### 2. Gutter assembling method

It is performed if you attach the gutter to the front of the product closely and lift up the gutter cover slightly.

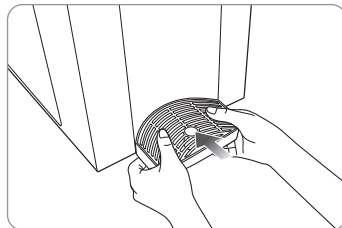

# FILTER REPLACEMENT

## ■ Filter

Filter is a critical component for a water filtration system. Replacing authorized filters at a specified replacement cycle is important to maintain the water quality, and a proper system operation. Please replace filters at a specified replacement cycle. For replacement filters, please contact Coway authorized dealers and distributors.




## ■ Filter replacement cycle

If the filter is not regularly replaced, it may degrade the water quality from the product. The source water quality can shorten the filter replacement period.

### CHP-06DL

Part No.	Names of Filter	Replacement cycle
CNFN8S	Neo-sense filter	6 months
CRMFN8S-20	RO Membrane filter	20 months
CIFN8S-PLUS	Plus Inno-sense filter	18 months
CAF-03	Antibacterial filter (option) *	12 months

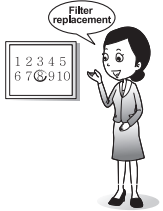

\* The Antibacterial filter contains silver, which is known to inhibit the propagation of microorganisms and to maintain the integrity of the filter.

## ■ About filter replacement cycle



The filter replacement cycle described above is not the filter quality warranty period but the expected cycle (life) that the filter shows its original performance.

Therefore, the filter replacement cycle may be reduced for the area with the poor water quality or more water consumption.




## FILTER REPLACEMENT METHOD

1. Close the main water supply valve after unplugging the power cord, and drain the water inside of the water filtration device (See P.19).

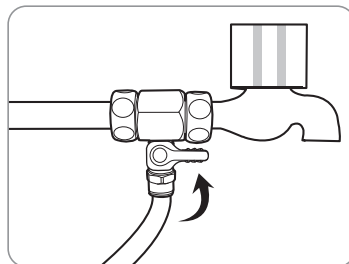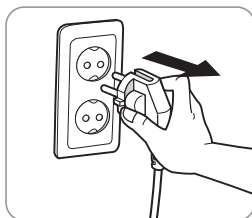

2. After separating the fitting connected to the filter to replace, please replace the filter. (Separate the fitting using the proper tool.)

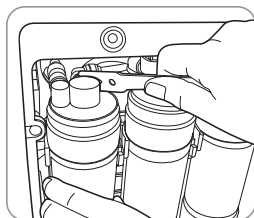

Tips

- ⚠ When you are replacing filters, please make sure that a corresponding filter and a hose are firmly connected and that there is no leakage. It is recommended to empty the water tank filled with the filtered water at least one time right after the filter replacement.

3. Insert the lower part of the side cover precisely in its place.



Tips

- ⚠ Before installing a new filter, please do the filter cleansing first as directed below:

Filter Name	Cleansing Time	Comment
Neo-sense filter	30 seconds	Flush the whole system twice
Plus Inno-sense filter		Please use the filter without flushing
Ro membrane filter	5 minutes	Please use Neo-sense filtered water for cleansing

# TROUBLESHOOTING

The water filtration device may operate abnormally due to minor causes not because of the product malfunction but because of the fact that the user is not familiar with the product use. In such a case, problems can be solved easily even without the help from the Service Center by checking the following items. If you can't solve the problem after checking the following items, please call the Service Center.

Symptom	Check	Measures to take
The water tastes weird.	• Did you clean the storage tank?	Clean the storage tank.
	• You didn't use the water filtration device for a long time.	Get rid of the saved water and clean the storage tank.
	• Isn't it about time to change the filter?	Request the filter replacement.
The water doesn't come.	• Is the water supply cut or isn't the water supply valve closed?	Open the main water supply valve.
	• Did you miss the filter replacement times?	Request the filter replacement.
The water is flowing slower.	• Isn't it about time to change the filter?	Request the filter replacement.
	• Does the main power connect to the voltage rating that matches it on the rating plate?	Connect the power cord to the voltage rating that matches it on the rating plate.
	• Didn't you close the main water supply valve?	Open the main water supply valve.
	• Didn't the temperature of the main water drop suddenly?	If the water temperature is lowered, the water amount is decreased.
The cold water doesn't come.	• Was the cold water mode indicator lightened?	Please press the cold water mode selection button.
	• Didn't you close the main water supply valve?	If it is the low water level to protect the electric motor, the cooling function doesn't operate. Open the main water supply valve.
	• Isn't the back side of the water filtration device and the wall too close?	Please keep the distance between the back of the water filtration device and the wall to 10 cm or more.
The hot water doesn't come.	• Was the hot water mode indicator lightened?	Turn on the hot water mode by pressing the hot water mode selection button.
	• Does the main power connect to the voltage rating that matches it on the rating plate?	Connect the power cord to the voltage rating that matches it on the rating plate.
	• Isn't water overflowing or leaking?	Request A/S.




Symptom	Check	Measures to take
The water doesn't come or the amount of input and output come out differently.	• Isn't it about time to change the filter?	Request the filter replacement.
	• Wasn't the water cut or the main water supply valve closed?	Open the main water supply valve.
	• It seems that the cold water/hot water/room water extraction faucet is out of order.	Request A/S.
	• Wasn't the hose bent or folded?	Please straighten the hose correctly.
	• Isn't the main water inlet hose too long?	Please set the main water inlet hose within 5 m.
A leakage was occurred.	• Did the water from the storage tank cover or inside of the product flow out?	Please request the service after closing the main water supply valve.
All operation was stopped suddenly when driving.	• Is the main water being supplied actively?	Check the main water supply valve.
	• Does the main power connect to the voltage rating that matches it on the rating plate?	Connect the power cord to the voltage rating that matches it on the rating plate.
	• Isn't water overflowing or leaking?	Request A/S.

# SPECIFICATION

Product		Water Filtration Device
Model		CHP-06DL
Filtration Method		RO(Reverse Osmosis)
Power Supply		Refer to the rating plate.
Tank Capacity	Room Water	3 L
	Cold Water	2.3 L
	Hot Water	1.2 L
	Total	6.5 L
Dimension		260 mm(W) × 440 mm(D) × 510 mm(H)
Working Temperature		5 °C - 35 °C
Production Rate		76.8 L/d (25 °C, 138 kPa)
Working Pressure		138 kPa – 827 kPa
Net Weight		18.7 kg

- The water amount can be differentiated according to the water pressure and the water temperature.
- The water tank capacity is the amount by the size and can be different from the extraction capacity.
- Without any prior notice, all or parts of the product are subject to change for the purpose of improving the performance of the product.
- Refer to Performance data sheet for individual contaminants, reduction performance and general operating information.

# WATER FLOW DIAGRAM

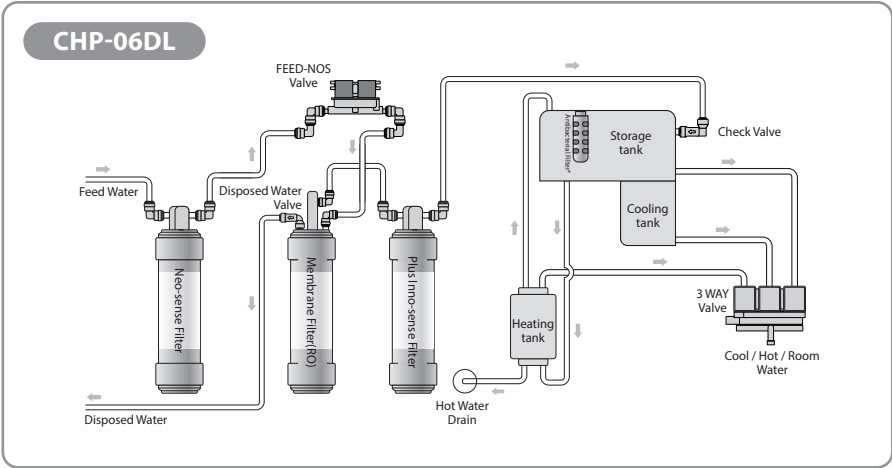

\* The Antibacterial filter contains silver, which is known to inhibit the propagation of microorganisms and to maintain the integrity of the filter.

**MEMO**

////////////////////////////////////

MEMO

////////////////////////////////////

**WARRANTY CARD OR WARRANTY LETTER**  
**ONE YEAR LIMITED WARRANTY**  
**WATER FILTRATION DEVICE CHP-06DL ("PRODUCT")**

**Model:**

**Serial Number:**

**Customer Name:**

**("OWNER")**

**Date of Purchase:**

---

---

**What This Warranty Covers:**

Commencing with the date of purchase of the Product and continuing for a period of one year, if manufacturing defects in the Product cause the Product to not operate properly for its intended use, then subject to the exclusions, conditions, and limitations contained herein, COWAY at its sole option will repair or replace the Product.

Decisions as to the extent of repair or replacement required will be made solely by COWAY.

The remedy under this Warranty is available only for that portion of the Product exhibiting defects at the time of the warranty claim. The replacement Product as well as any remaining original Product will be warranted only for the original one year warranty period. This limited warranty applies only to Product used for an application specified by COWAY for the Product and applied in strict accordance with COWAY published specifications in effect at the time of application. IF PRODUCT IS USED FOR OTHER THAN ITS INTENDED PURPOSE, IT IS SOLD AS IS AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

**What This Warranty Does Not Cover:**

This Warranty warrants that the Product will be free from manufacturing defects which affect the ability of the Product to operate for its intended use; it is not a warranty that the Product will never require repairs or to undertake responsibilities, liabilities or obligations other than those specifically identified in the preceding section. COWAY is not responsible or liable for personal injury or property damage of any kind, even if arising from a breach of this Warranty.

**Limitations and Exclusions:**

TO THE EXTENT PERMITTED BY APPLICABLE LAW, COWAY DISCLAIMS ANY OTHER WARRANTY EXPRESS OR IMPLIED, THAN THAT GUARANTEES FOR HEREIN. THIS WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, PROVIDES, CONDITIONS AND REPRESENTATIONS, EXPRESS OR IMPLIED, ORAL OR WRITTEN, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED CONDITIONS OR WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE COWAY PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. COWAY DOES NOT AUTHORIZE ANY PERSON INCLUDING ITS REPRESENTATIVES, TO MAKE ANY REPRESENTATION OR TO OFFER ANY WARRANTY, CONDITION OR GUARANTY IN RESPECT OF THE PRODUCT OTHER THAN THIS WARRANTY. THIS LIMITED WARRANTY SHALL BE THE OWNER'S SOLE AND EXCLUSIVE REMEDY AGAINST COWAY AND COWAY SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, INCIDENTAL OR OTHER DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, AND LOSS OF USE. INCIDENTAL, CONSEQUENTIAL AND EXEMPLARY DAMAGES SHALL NOT BE RECOVERABLE EVEN IF THE REMEDIES OR THE ACTIONS PROVIDED FOR IN THIS WARRANTY FAIL OF THEIR ESSENTIAL PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. COWAY SHALL NOT BE LIABLE FOR ANY DAMAGES WHICH ARE BASED UPON NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR ANY OTHER LEGAL THEORY OF LIABILITY OTHER THAN THE EXCLUSIVE LIABILITY SET FORTH IN THIS WARRANTY

**Limitations on Implied Warranties:**

Any implied warranty of merchantability or fitness for a particular purpose or use, shall be limited to the duration of the foregoing express written warranty.

**Conditions of Warranty:**

COWAY's continuing liability under this Warranty is conditioned upon the following :

- a) The defect or damage is not caused by or is the result of : abnormal use or conditions; improper storage, unauthorized modifications or repair; misuse, neglect, accident, alteration, improper installation or other acts that are not the fault of Coway or the manufacturer of the product or that are not covered by the manufacturer's warranty;
- b) The Product has not been altered, modified or repaired without prior written approval of COWAY;
- c) The OWNER has notified COWAY in writing of any failure of the Product covered by this Warranty within thirty (30) days following such failure;

- d) There has been no misuse, abuse or negligence with respect to the Product on the part of the OWNER.

**Waiver:**

COWAY's failure at any time to enforce or rely upon any of the terms or conditions stated herein shall not be construed to be a waiver of its rights hereunder.

**Obtaining Warranty Service and OWNER'S Duties:**

If the Product fails to operate for its intended purpose, then notify Coway or its Representative Agency within 48 hours or within the next business day after discovery of any defect in the Product. The OWNER must give written notice to COWAY no later than thirty (30) days after a defect is discovered or should by reasonable diligence have been discovered. Claims under this Warranty will require proof of purchase by the OWNER.

**KOREA**

Add : COWAY Co., Ltd.  
136-23, Yugumagoksa-ro, Yugu-eup, Gongju-si,  
Chungcheongnam-do, 32508 Korea  
Tel. : 041-850-7879

**USA**

Add : Coway USA, Inc.  
4221 Wilshire Blvd. #210, Los Angeles, CA 90010  
Call center : 213-386-3033

**THAILAND**

Add : Coway (Thailand) Co., Ltd.  
75/104-106 Ocean Tower 2 38th Fl, Soi Sukhumvit  
19 (Wattana), Sukhumvit Road, Klongtoey Nua,  
Wattana, Bangkok 10110  
Call center : 02-261-0209

**MALAYSIA**

Add : Coway (Malaysia) Sdn. Bhd.  
Level 20, Ilham Tower, No. 8, Jalan Binjai,  
50450 Kuala Lumpur.  
Call center : 1-800-888-111

coway

[www.coway.com](http://www.coway.com)

